My Passport™ for Mac®
My Passport SE for Mac

Ultra-Portable Hard Drives

User Manual

Western Digital®

External Portable

WD Service and Support

Should you encounter any problem, please give us an opportunity to address it before returning this product. Most technical support questions can be answered through our knowledge base or e-mail support service at *support.wdc.com*. If the answer is not available or if you prefer, please contact WD® at the best telephone number shown below.

Your product includes 30 days of free telephone support during the warranty period. This 30-day period starts on the date of your first telephone contact with WD Technical Support. E-mail support is free for the entire warranty period and our extensive knowledge base is available 24/7. To help us keep you informed of new features and services, remember to register your product online at *http://register.wdc.com*.

Accessing Online Support

Visit our product support website at *support.wdc.com* and choose from these topics:

- **Downloads**—Download drivers, software, and updates for your WD product.
- **Registration**—Register your WD product to get the latest updates and special offers.
- **Warranty & RMA Services**—Get warranty, product replacement (RMA), RMA status, and data recovery information.
- **Knowledge Base**—Search by keyword, phrase, or answer ID.
- **Installation**—Get online installation help for your WD product or software.

Contacting WD Technical Support

When contacting WD for support, have your WD product serial number, system hardware, and system software versions available.

North America		**Asia Pacific**	
English	800.ASK.4WDC	Australia	1 800 42 9861
	(800.275.4932)	China	800 820 6682/+65 62430496
Spanish	800.832.4778	Hong Kong	+800 6008 6008
		India	1 800 11 9393 (MNTL)/1 800 200 5789 (Reliance) 011 26384700 (Pilot Line)
Europe (toll free)*	00800 ASK4 WDEU	Indonesia	+803 852 9439
	(00800 27549338)	Japan	00 531 650442
		Korea	02 703 6550
Europe	+31 880062100	Malaysia	+800 6008 6008/1 800 88 1908/+65 62430496
Middle East	+31 880062100	Philippines	1 800 1441 0159
Africa	+31 880062100	Singapore	+800 6008 6008/+800 608 6008/+65 62430496
		Taiwan	+800 6008 6008/+65 62430496

* Toll free number is available in the following countries: Austria, Belgium, Denmark, France, Germany, Ireland, Italy, Netherlands, Norway, Spain, Sweden, Switzerland, United Kingdom.

Table of Contents

WD Service and Support ii
Accessing Online Support ii
Contacting WD Technical Support ii

1 About Your WD Drive 1

Features 1
Kit Contents 2
Optional Accessories 2
Operating System Compatibility 3
Disk Drive Format 3
Physical Description 3
Power/Activity LED 4
USB 2.0 Interface 4
Registering Your Drive 4
Handling Precautions 4

2 Connecting the Drive and Getting Started 5

Connecting the Drive 5
Enhancing Performance with WD +TURBO 7
Getting Started with the WD SmartWare Software 9
WD SmartWare Software Overview 10
WD SmartWare Home Screen 11
Viewing the Info/Online Help Topics 12

3 Backing Up Your Computer Files 13

About Backing Up Your Computer Files 13
Backing It All Up 15
Advanced Backup Capabilities 16
Selecting Specific Content to Back Up 16
Changing the Backup Software Settings 17

4 Retrieving Backed Up Files 20

About Retrieving Files 20
Retrieving a File 20
Retrieving a Folder 23
Retrieving an Earlier Version of a File or Deleted Files 23
Retrieving All Your Content 23

5 Locking and Unlocking Your Drive 24

Password Protecting Your Drive. 24
Unlocking Your Drive 25
Unlocking Your Drive with the WD SmartWare Software. 26
Unlocking Your Drive Without the WD SmartWare Software 27
Turning Off the Drive Lock Feature. 28
Changing Your Password 28

6 Managing and Customizing Your Drive 29

Using the WD SmartWare Icon. 29
Opening the WD SmartWare Software. 29
Checking Drive Status 30
Safely Dismounting the Drive 31
Using the WD SmartWare Icon. 31
Using the My Passport Icon 31
Customizing Your Software Settings 32
Specifying a Different Retrieve Folder 32
Setting the Preferences Options 33
Customizing Your Drive Settings 33
Registering Your Drive 34
Setting the Drive Sleep Timer. 35
Erasing Your Drive 35
Uninstalling the WD SmartWare Software 38
Restoring the WD SmartWare Software and Disk Image 39

7 Checking Drive Health 40

8 Using the Drive with Windows 42

Reformatting the Drive 42
Restoring the WD SmartWare Software and Disk Image 42
Installing the Drive on Windows Computers. 43
Getting Started with the WD SmartWare Software 45
Using the WD SmartWare Icon. 49
Opening the WD SmartWare Software. 49
Checking Drive Status 50
Monitoring Icon Alerts. 50
Disconnecting the Drive Safely. 50
Enabling the Backup and Retrieve Functions. 51
Unlocking the Drive 51
Unlocking Your Drive with the WD SmartWare Software. 52
Unlocking Your Drive Without the WD SmartWare Software 53
Uninstalling the WD SmartWare Software 53
Uninstalling on Windows XP. 53
Uninstalling on Windows Vista or Windows 7 54
Getting Started Without the WD SmartWare Software. 54

9 Troubleshooting 55

Installing, Partitioning, and Formatting the Drive 55
Frequently Asked Questions. 55

A Installing an SES Driver 57

Installing on Windows XP Computers 57
Installing the Driver Automatically 57
Installing the Driver Manually 59
Installing on Windows Vista Computers 61
Installing the Driver Automatically 61
Installing the Driver Manually 62
Installing on Windows 7 Computers 64

B Compliance and Warranty Information 66

Regulatory Compliance 66
FCC Class B Information 66
ICES-003/NMB-003 Statement 66
Safety Compliance 66
CE Compliance For Europe 66
KCC Notice (Republic of Korea only) 67
Environmental Compliance (China). 67
Warranty Information 67
Obtaining Service 67
Limited Warranty 67
GNU General Public License (“GPL”) 68

Index 69

1

About Your WD Drive

Welcome to your My Passport™ or My Passport SE for Mac® ultra-portable hard drive, an elegant, high-capacity storage solution for all the chapters of your digital life. Our latest edition features visual, easy-to-use, automatic, continuous backup software and drive lock security protection.

WD's best-selling My Passport and My Passport SE for Mac USB external hard drives feature WD SmartWare software that backs up your data automatically and continuously, shows your backup as it happens, and brings back lost files effortlessly.

This introductory chapter includes the following topics:

Features
Kit Contents
Optional Accessories
Operating System Compatibility
Disk Drive Format
Physical Description
Registering Your Drive
Handling Precautions

Features

Major features of the My Passport and My Passport SE for Mac drives include:

Smaller, sleeker, more streamlined design—We've designed a smaller, high-quality integrated USB hard drive inside a stylish package in a variety of fun colors.

WD SmartWare™ software—An easy-to-use backup solution for your drive that gives you the power to:

- Protect your data automatically—Relax! Your data is secure. Automatic, continuous backup will instantly make a second copy whenever you add or change a file.
- See your backup as it happens—Seeing is believing. Visual backup organizes and displays your content into categories and shows the progress of your backup.
- Bring back lost files effortlessly—Retrieve your valuable data to its original location whether you've lost all your data, deleted a file, or just overwritten an important file.
- Take control—Customize your backup, set drive security, run diagnostics, manage the power settings, and more from the WD SmartWare control center.
- Drive lock—Gain peace of mind knowing that your data is protected from unauthorized access or theft with password protection and 256-bit hardware-based encryption.

USB 2.0 interface—A simple connection that offers convenience and compatibility among multiple computers.

Power miser—My Passport portable drives are designed to save energy. WD GreenPower Technology™ lowers internal drive power consumption by up to 30%, a sleep mode reduces power during idle times, and a power-saving feature turns the drive on and off with your computer.

Planet friendly—We designed a small box from recycled materials to minimize waste. We encourage you to recycle it.

Ready to plug-and-play with Mac computers—HFS+J-formatted for compatibility with all Mac OS X operating systems.

Support for multiple devices—One installation of the software supports up to three WD drives (My Passport or My Book drives with WD SmartWare software).

Important: For the latest WD product information and news, visit our website at *www.westerndigital.com*. For the latest software, firmware, and product documentation and information, go to *http://products.wdc.com/updates*.

Kit Contents

As shown in Figure 1, your My Passport or My Passport SE for Mac drive kit includes the following:

- My Passport or My Passport SE for Mac ultra-portable hard drive
- WD SmartWare software (included on the drive)
- USB micro cable
- Quick Install Guide

Figure 1. My Passport Drive Kit Contents

Optional Accessories

You can use the following accessories with the My Passport drive:

- A special USB micro cable that might be needed for computers with limited bus power
- Replacement or additional USB micro cables
- A My Passport dock that holds, charges, and connects the My Passport drive to your computer:

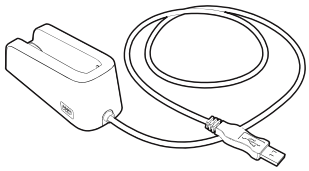

For information about optional accessories for this product, visit:

US	*www.shopwd.com* or *www.wdstore.com*
Canada	*www.shopwd.ca* or *www.wdstore.ca*
Europe	*www.shopwd.eu* or *www.wdstore.eu*
All others	Contact WD Technical Support in your region. For a list of Technical Support contacts, visit *support.wdc.com* and see Knowledge Base Answer ID 1048.

Operating System Compatibility

Your My Passport or My Passport SE for Mac drive and the WD SmartWare software are compatible with the following operating systems:

Mac® OS X®

- Tiger®
- Leopard®
- Snow Leopard™

Windows®

- Windows XP
- Windows Vista®
- Windows 7

Compatibility can vary, depending on hardware configuration and operating system.

For highest performance and reliability, always install the latest software updates and service pack (SP). For Mac computers, go to the **Apple** menu and select **Software Update**. For Windows computers, go to the **Start** menu and select **Windows Update**.

Disk Drive Format

Your My Passport or My Passport SE for Mac drive is preformatted as a single HFS+J partition for compatibility with all Mac OS X operating systems. If you want to use this drive with a Windows computer, see “Reformatting the Drive” on page 42 and “Troubleshooting” on page 55.

Physical Description

As shown in Figure 2, the My Passport and My Passport SE for Mac drives have:

- A power/activity LED indicator
- A USB 2.0 interface port

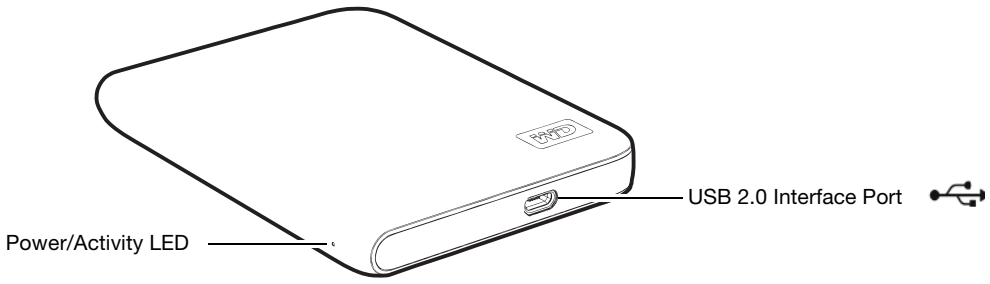

Figure 2. My Passport and My Passport SE for Mac Drive

Power/Activity LED

The power/activity LED shows the drive's power state as follows:

LED Appearance	Power State
On steady	Idle
Fast flashing, approximately 3 times per second	Drive activity
Slow flashing, approximately every 2.5 seconds	System standby

USB 2.0 Interface

Hi-Speed USB 2.0 supports data transfer rates up to 480 Mb/s. USB 2.0 is backward-compatible with USB 1.1. Connection to a USB 1.1 port transfers data at USB 1.1 speed (up to 12 Mb/s).

Registering Your Drive

Always register your My Passport or My Passport SE for Mac drive to get the latest updates and special offers. You can easily register your drive using the WD SmartWare software, as described in "Registering the Drive" on page 35. Another way is to register online at *register.wdc.com*.

Handling Precautions

WD products are precision instruments and must be handled with care during unpacking and installation. Drives can be damaged by rough handling, shock, or vibration. Always observe the following precautions when unpacking and installing your external storage product:

- Do not drop or jolt the drive.
- Do not move the drive during activity.

2

Connecting the Drive and Getting Started

This chapter provides step-by-step instructions for connecting the drive and installing the WD SmartWare software on your computer. It includes the following topics:

Connecting the Drive
Enhancing Performance with WD +TURBO
Getting Started with the WD SmartWare Software

Connecting the Drive

To connect your My Passport or My Passport SE drive to your Mac OS X Tiger/Leopard/ Snow Leopard computer:

1. Turn on your computer.
2. Connect the drive to your computer, using either:
   - The USB micro cable as shown in Figure 3
   - An optional My Passport dock, as shown in Figure 4 on page 6

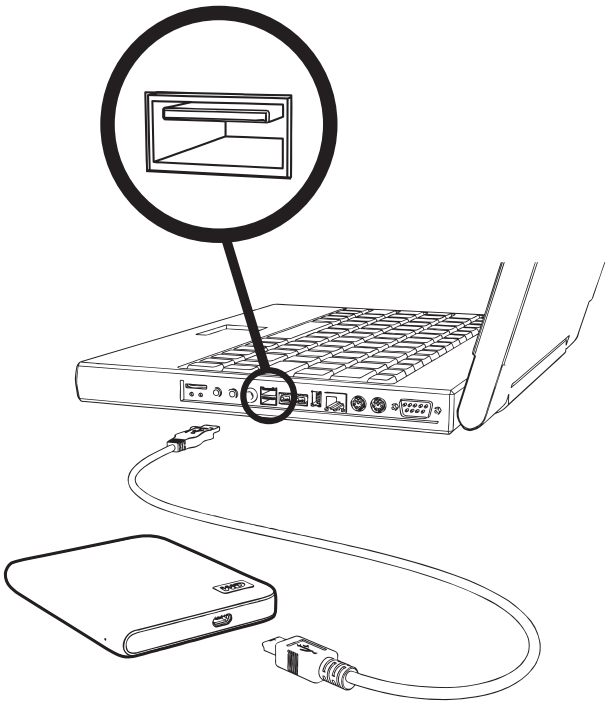

Figure 3. Using the USB Micro Cable to Connect the My Passport Drive

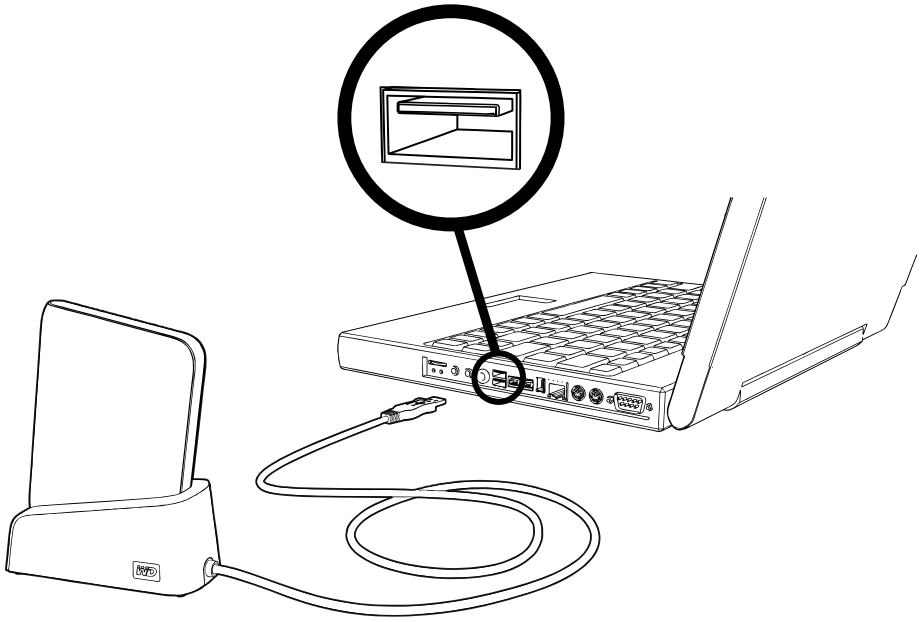

Figure 4. Using the Optional My Passport Dock to Connect the My Passport Drive

3. If you have reformatted the drive for use on a Windows computer, skip the rest of this procedure and see “Installing the Drive on Windows Computers” on page 43 instead.
4. After you physically connect the drive, verify that the My Passport icon displays on your desktop:

Your My Passport drive is now ready to use as an external storage device. You can enhance its performance by installing the following software that is available on the drive:

- WD +TURBO utility (see “Enhancing Performance with WD +TURBO” on page 7)
- WD SmartWare software (see “Getting Started with the WD SmartWare Software” on page 9)

Enhancing Performance with WD +TURBO

WD +TURBO is a utility on the My Passport drive that you can install to improve the performance of the drive on a Mac computer.

To install WD +TURBO:

1. Double-click the My Passport icon, and then double-click the Extras folder on the screen that displays:

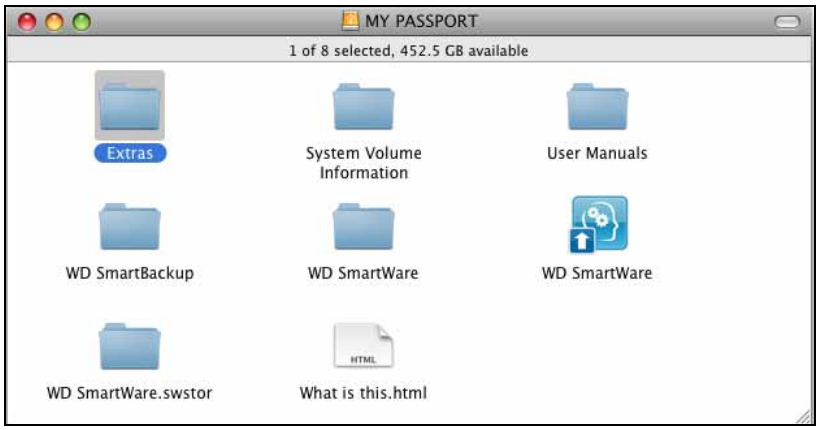

2. Double-click the WD +TURBO Installer icon:

3. Click **Install** on the WD +TURBO Driver Installer screen:

4. Read the license agreement and click **Accept** to continue.

5. A message informs you that installing the drivers requires you to restart your computer to make them active:

Installing the Western Digital +TURBO drivers requires you to restart the computer to make them active.
Do you want to proceed and install the drivers?
No
Yes

Click **Yes** to continue.

6. Type the password that you normally use to access the computer in the **Password** box and click **OK**:

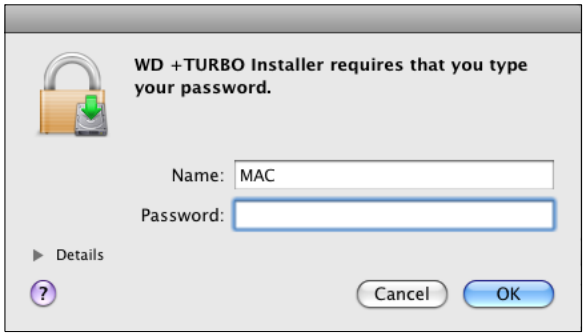

7. As prompted, when the installation completes, click **Yes** to restart the computer:

8. After the computer restarts, the My Passport icon on the desktop looks like this:

Your My Passport drive is now ready to use as an enhanced-performance external storage device.

Getting Started with the WD SmartWare Software

To install the WD SmartWare software:

1. Double-click the My Passport icon, and then double-click the WD SmartWare icon on the screen that displays:

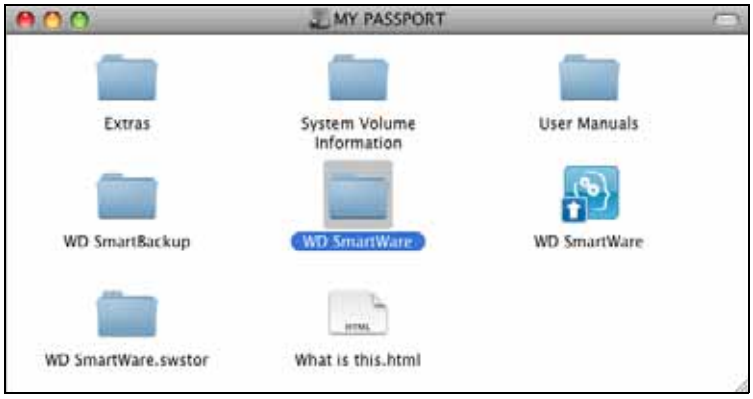

Note: Mac OS X Leopard and Snow Leopard only: A message asks if you want to use the My Passport drive to back up with Time Machine:

Do you want to use "MY PASSPORT" to back up with Time Machine?
Time Machine keeps an up-to-date copy of everything on your Mac. It not only keeps a spare copy of every file, it remembers how your system looked, so you can revisit your Mac as it appeared in the past.
Cancel
Use as Backup Disk

WD SmartWare software is fully compatible with Apple's Time Machine software. When using Time Machine, you can still use the WD SmartWare software for password protecting the drive, registering the drive, and running drive diagnostics.

a. If you *do not* want to use the Time Machine backup software, click **Cancel**.

b. If you *do* want to use the Time Machine backup software, click **Use as Backup Disk**. The My Passport icon now displays as:

The WD SmartWare Software Installer screen displays:

WD SmartWare Software Installer
Welcome to the WD SmartWare software installer.
WD SmartWare provides all the software you need to organize, secure, back up, and retrieve your important files and memories. WD SmartWare backs up files continuously so your files are updated each time you make a change and you never have to worry about losing data.
Exit
Continue to Install

2. Click **Continue to Install** and the installer utility will detect that the WD SmartWare software is not installed:

3. Click **Install WD SmartWare** to begin the installation.
4. Read the license agreement and click **Accept** to continue.
5. Wait for the installation to complete. This could take several minutes:

WD SmartWare Software Installer
Installing the WD SmartWare software.
Installing software
WD SmartWare Software Installer for Mac (WD SmartWare is not installed.) -->
v1.2.2.3
Exit
Install WD SmartWare

6. When the installation completes, the WD SmartWare Home screen displays (see Figure 5 on page 11).

WD SmartWare Software Overview

WD SmartWare software is an easy-to-use tool that gives you the power to:

- Secure your drive—In drive settings, create a password to protect your encrypted drive from unauthorized access or data theft.
- Protect your data automatically—Automatic, continuous backup instantly makes a copy whenever you add or change a file.

  Note: Automatic backup protection is continuous for as long as your My Passport drive is connected to your computer. Then, whenever you disconnect and reconnect the drive to your computer, the WD SmartWare software rescans your computer for new or changed files and resumes automatic, continuous backup as before.

- See your backup as it happens—Seeing is believing. Visual backup organizes and displays your content into categories and shows the progress of your backup.
- Retrieve lost files effortlessly—Bring back your valuable data to its original location whether you've lost all your data or just overwritten an important file.

Figure 5. Home Screen

WD SmartWare Home Screen

The WD SmartWare Home screen has four tab-selected options:

- Home—Provides a Content Gauge with the capacity of each hard drive in or connected to your computer (see Figure 5)
- Backup—Manages existing backups or creates new backups of your important data, including movies, music, documents, e-mail, and photos (see Figure 6 on page 14)
- Retrieve—Brings back valuable data that has been lost or overwritten (see Figure 9 on page 21)
- Settings—Manages security, diagnostics, power settings, and backup parameters (see Figure 7 on page 17)

On the Home screen, you can modify the primary drive being categorized with the drop-down selection box under the name of your computer. By selecting a different drive, the system will identify the categories of files on that drive. Then click the:

- **Backup** tab to back up files from the selected drive to your My Passport drive
- **Retrieve** tab to retrieve backed up files from your My Passport drive to any location on your computer

In the Content Gauge for your computer's hard drive, all of your files that are available for backup are shown against a blue background in categories that are based on the following folders on your computer:

- **Music**
- **Movies**
- **Pictures**
- **Mail**
- **Documents**
- **Other**

Each category includes all of the files in the represented folder except the **Other** category, which includes all of the files in all other folders on your computer.

Note that:

- The **System** category, shown against a dark gray background, includes all of your operating system files that are not available for backup. Files that are not backed up include system files, program files, applications, and working files.
- The **Retrieved** category, also shown against a dark gray background, shows the files that you have retrieved from a prior backup. They, too, are not available for backup.
- Hovering the pointer over a category shows the number of files in the category.

In the Content Gauge for your My Passport drive, the **Additional Files** category includes all of the files shown in the used space portion of your drive properties. This space is not available for backups.

Note: The small number of files that are shown in the **Additional Files** category when you first install the WD SmartWare software—before performing your first backup—represents the system and hidden files that your computer's operating system put there when you installed the drive.

Viewing the Info/Online Help Topics

Each WD SmartWare screen provides easy access to online help information to quickly guide you through your backup, retrieve, and settings tasks. Whenever you are uncertain about what to do, just click the info/online help icon in the upper-right corner of any screen:

To close the info/help screen after reading the online help, click the red X button in the upper-left corner of the screen.

3

Backing Up Your Computer Files

This chapter includes the following topics:

About Backing Up Your Computer Files
Backing It All Up
Advanced Backup Capabilities

About Backing Up Your Computer Files

The WD SmartWare software automatically and continuously backs up all of the content on your computer to your My Passport drive—music, movies, photos, documents, e-mail, and other files.

Note: One installation of the WD SmartWare software supports up to three backup drives that are configured with WD SmartWare software.

After the WD SmartWare software categorizes the different types of content you have, simply clicking the **Run Backup** button will back all of them up. Or, you can select specific types of content to back up.

After performing a backup, the WD SmartWare software protects your files by backing up any:

- New file that is created on your computer or copied to your hard drive
- Existing file that is changed in any way

This protection is automatic—the WD SmartWare software does it for you without any action on your part—just make sure to leave your My Passport drive connected to your computer.

Note: Automatic backup protection is continuous for as long as your My Passport drive is connected to your computer. Then, whenever you disconnect and reconnect the drive to your computer, the WD SmartWare software rescans your computer for new or changed files and resumes automatic, continuous backup as before.

Additionally, the Backup screen (see Figure 6 on page 14) provides:

- Content Gauges for your computer's disk drives, so you can see the number of files and the storage size for each content category
- An **Update Gauges** button for rescanning the drive and verifying accurate Content Gauge counts after adding or changing files on your computer
- A **Detailed View** content box that you can use to select specific categories of files or folders to back up, with an **Apply** button for implementing your selections
- **Run Backup** and **Pause Backup** buttons for starting and stopping backups

Figure 6. Backup Screen

In the Content Gauges for your computer's disk drives, the categories of files that would be included in the backup if you click **Run Backup** are shown where a:

- Light blue background in the Content Gauge for your computer's hard drive identifies the original files that are available for backup
- Gray background in the Content Gauge for your My Passport drive identifies the potential backup copies of the original files
- Dark blue background identifies categories of files that have been backed up

In the Content Gauge for your My Passport drive, the **Additional Files** category includes all of the files shown in the used space portion of your drive properties. This space is not available for backups.

In the Content Gauges and the **Detailed View** content box, the file categories are based on the following folders on your computer:

- **Music**
- **Movies**
- **Pictures**
- **Mail**
- **Documents**
- **Other**

Each category includes all of the files in the represented folder except the **Other** category, which includes all of the files in all other folders on your computer.

Note that:

- The **System** category, shown against a dark gray background, includes all of your operating system files that are not available for backup. Files that are not backed up include system files, program files, applications, and working files.
- The **Retrieved** category, also shown against a dark gray background, includes the files that you have retrieved from a prior backup. They, too, are not available for backup.
- Hovering the pointer over a category shows the number of files in the category.

To back up a different hard drive, click the **Home** tab and select the drive.

Backing It All Up

To back up all of your computer files:

1. Click the **Backup** tab to display the Backup screen (see Figure 6 on page 14).
2. Click **Run Backup** to back up all of your files.
3. During the backup:
   - The Backup screen displays a progress bar and a message indicating the amount of data that has been backed up.
   - The blue background in the Content Gauge for your computer's hard drive changes to yellow/amber for all of the files that have not yet been backed up.
   - The gray background in the Content Gauge for your My Passport drive changes to blue for each category as the backup completes.
   - You can continue to set up your drive or perform any other functions during the backup, as the WD SmartWare software backs up your files in the background.
   - A **Pause Backup** button is available for you to stop the backup.
4. Appearance of a backup successfully finished message means that the backup completed normally.

   If any files could not be backed up, their representations remain yellow/amber in the Content Gauge for your computer's hard drive and the WD SmartWare software displays a:

   - Caution message indicating the number of files involved
   - **View** link that you can click to see a list of the files and the reasons they were not backed up

   Some applications and running processes can keep files from being backed up. If you cannot determine why some of your files were not backed up, try:

   - Saving and closing all of your open files
   - Closing all running applications—including your e-mail program and web browser

Important: Appearance of a Caution message indicating that your drive is full means that there is not enough free space on the drive to complete the backup.

The best long-term solution would be to relegate the drive to long-term archive storage and:

a. Click the **Home** tab to display the Home screen.
b. Click the **WDStore** link in the WD Online box to view the Western Digital Online Store website.
c. Click **External Hard Drives** and select the best drive to suit your future requirements.

5. If you clicked **Pause Backup** at step 3, the **Stop backup?** confirmation prompt reminds you that if you stop the backup before it completes, the WD SmartWare software removes all of the backup files that were just copied to your My Passport drive.

   To continue, click either:

   - **Continue Backup** to disregard your pause request and resume the backup
   - **Stop Backup** to follow through with your pause request, stop the backup, and remove the newly created backup files

Advanced Backup Capabilities

The advanced backup capabilities include:

- Selecting specific content to back up
- Changing the backup software settings:
  - Choosing the number of backup versions to keep
  - Pausing the backup until your computer is idle

Selecting Specific Content to Back Up

To back up some of your computer files:

1. On the Backup screen (see Figure 6 on page 14), select **Detailed View** to open the backup files content box:

2. In the backup files content box:
   - Select the check boxes for the categories of files that you want to include in the backup.
   - Clear the check boxes for the categories of files that you want to exclude from the backup.
3. Click **Apply** to refresh the Content Gauge for your My Passport drive.
4. Click **Run Backup** to back up the selected categories of files.

Changing the Backup Software Settings

To optimize your backup, you can:

- Specify the number of backup versions to keep for each file.
- Pause backups until your computer is idle.

To configure these backup options:

1. Click the **Settings** tab to display the Settings screen (see Figure 7).
2. Click **Set Up Software** to display the Software Settings screen (see Figure 8 on page 18).
3. See:
   - “Specifying the Number of Backup Versions” on page 18
   - “Pausing Backups Until Your Computer is Idle” on page 19

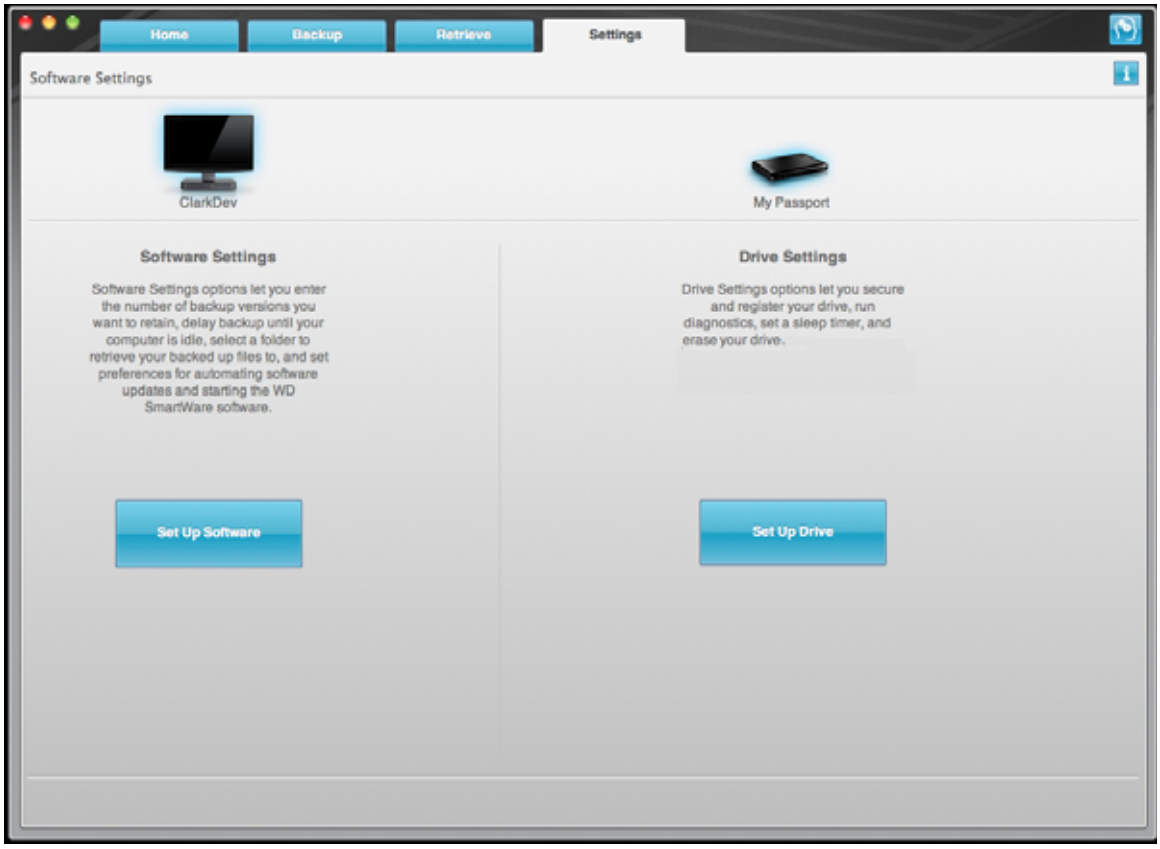
Home
Backup
Retrieve
Settings
Software Settings
ClarkDev
My Passport
Software Settings
Software Settings options let you enter the number of backup versions you want to retain, delay backup until your computer is idle, select a folder to retrieve your backed up files to, and set preferences for automating software updates and starting the WD SmartWare software.
Drive Settings
Drive Settings options let you secure and register your drive, run diagnostics, set a sleep timer, and erase your drive.
Set Up Software
Set Up Drive

Figure 7. Settings Screen

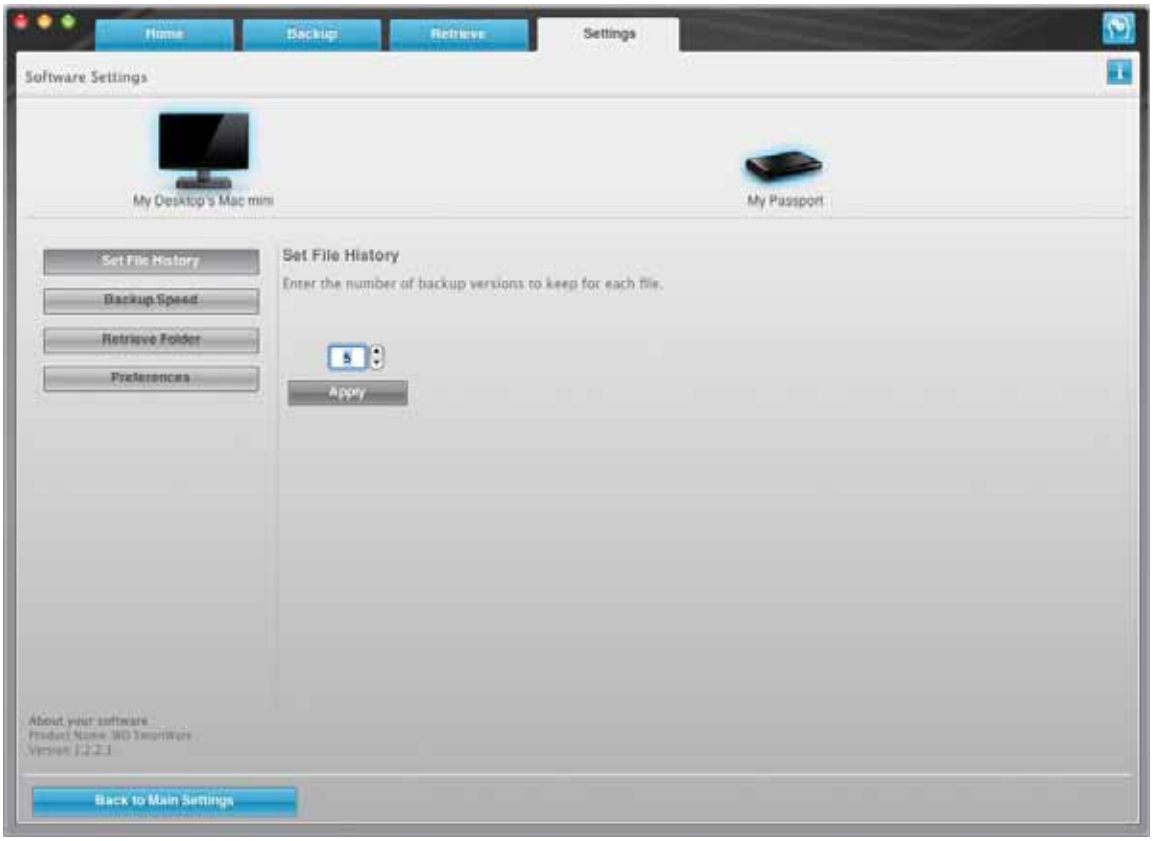

Figure 8. Software Settings Screen

Specifying the Number of Backup Versions. The WD SmartWare software can keep up to 25 older versions of each file. If you overwrite or delete a file by mistake, or want to see the file a couple of versions ago, the WD SmartWare software has a copy for you. You always have the most-recent specified number of versions of each file available for retrieves, and you can choose to keep from 1 to 25 versions.

Keeping more versions:

- Improves your ability to retrieve files from a longer back-in-time period
- Consumes more disk space

To specify the number of backup versions that you want to keep for each file:

1. On the Software Settings screen (see Figure 8), click **Set File History** to display the Set File History dialog:

2. Specify the number of file versions that you want to keep (from 1 to 25) in the **Enter the number of backup versions to keep for each file** box.
3. Click **Apply** to save and implement the new number of backup versions.

Pausing Backups Until Your Computer is Idle. A large backup can take a lot of time, and can consume a lot of your system processing resources. The WD SmartWare software works in the background using minimal computer resources while you are working on your computer. If you want to pause all backup activity until your computer is idle, you can by enabling the Backup Speed option:

1. On the Software Settings screen (see Figure 8 on page 18), click **Backup Speed** to display the Reduce Backup Speed dialog:

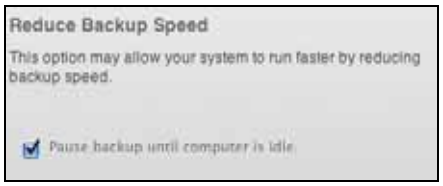
Reduce Backup Speed
This option may allow your system to run faster by reducing backup speed.
Pause backup until computer is idle

2. Select or clear the **Pause backup until computer is idle** check box to enable or disable the Backup Speed option.

4 Retrieving Backed Up Files

This chapter includes the following topics:

About Retrieving Files
Retrieving a File
Retrieving a Folder
Retrieving an Earlier Version of a File or Deleted Files
Retrieving All Your Content

About Retrieving Files

The WD SmartWare software makes it easy for you to retrieve files that have been backed up on your My Passport drive and either:

- Restore them to their original locations on your computer
- Copy them to a special retrieve folder

Retrieve is generally a five-step process:

1. Choose the drive to retrieve content from on the Home screen.
2. Choose the backup that you want to retrieve content from.
3. Choose whether content will be retrieved to a special retrieval folder or to the original location.
4. Choose what content to retrieve, either files, folders, or everything.
5. Retrieve the content.

Retrieving a File

After selecting the drive on the Home screen, you can retrieve files or complete folders from your My Passport drive. To retrieve a file from your drive:

1. Click the **Retrieve** tab to display the Retrieve screen (see Figure 9 on page 21).
2. In the **Backed Up Volumes** box, select the WD SmartWare volume that you want to retrieve a file or folder from and click **Select Destination** to display the Select a destination for retrieved files screen (see Figure 10 on page 21).
3. On the Select a destination for retrieved files screen:

IF you want to copy your retrieved content to . . .	THEN . . .
Its original location,	a. Select the **To the Original Places** option. b. Click **Select Files** to display the Select content to retrieve... screen (see Figure 11 on page 22) and proceed to step 4 on page 22.
A retrieved content folder,	a. Select the **In a Retrieved Content Folder** option. b. If you want to specify a different retrieve folder, click **Browse** and use the browse function to identify the new retrieve folder. c. Click **Apply** to save and implement the new retrieve folder. d. Click **Select Files** to display the Select content to retrieve... screen and proceed to step 4 on page 22.

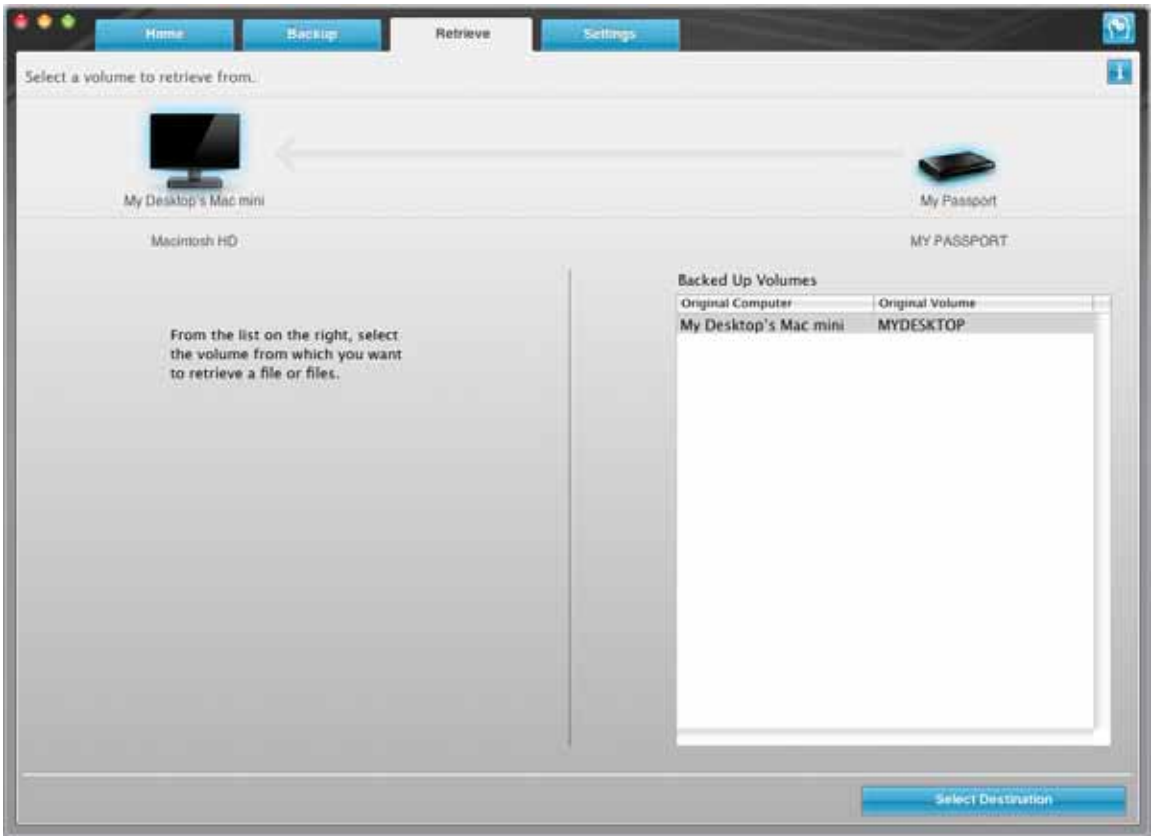

Figure 9. Retrieve Screen

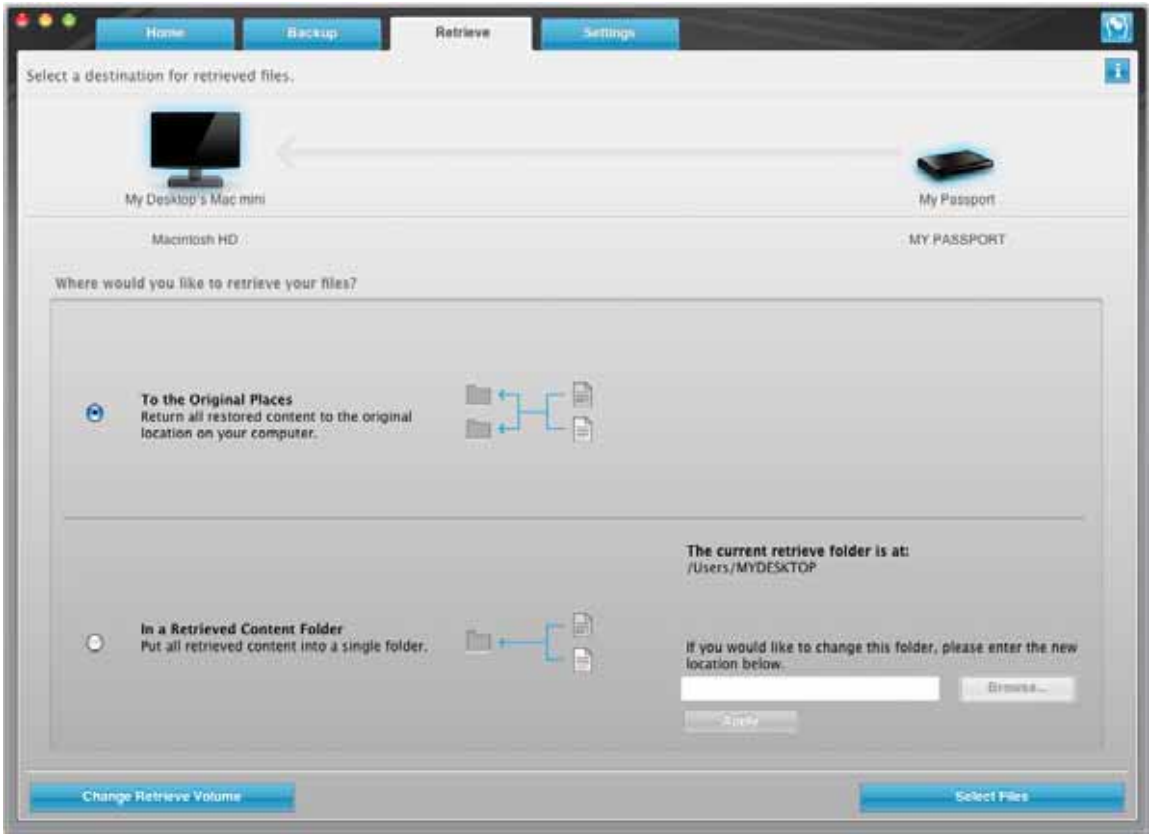
Home
Backup
Retrieve
Settings
Select a destination for retrieved files.
My Desktop's Mac mini
Macintosh HD
My Passport
MY PASSPORT
Where would you like to retrieve your files?
To the Original Places
Return all restored content to the original location on your computer.
The current retrieve folder is at:
/Users/MYDESKTOP
In a Retrieved Content Folder
Put all retrieved content into a single folder.
If you would like to change this folder, please enter the new location below.
Browse...
Apply
Change Retrieve Volume
Select Files

Figure 10. Select a Destination for Retrieved Files Screen

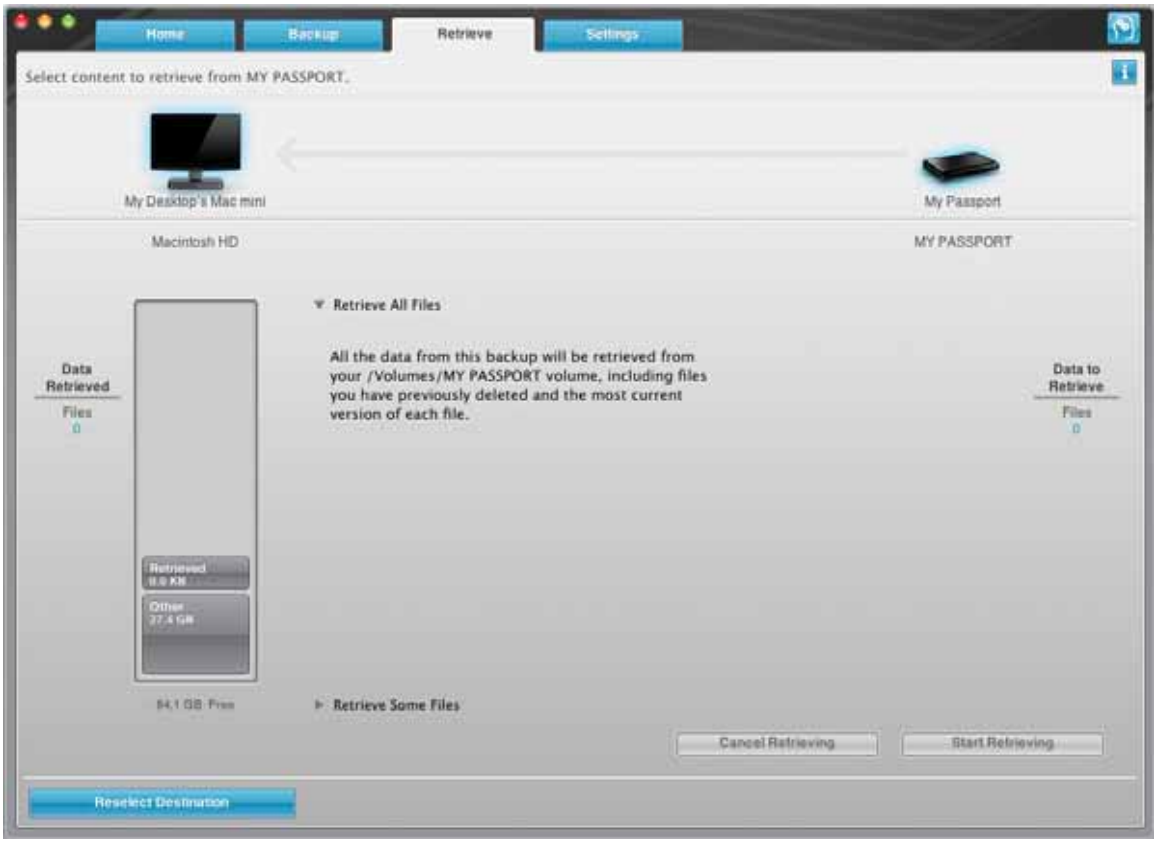

Figure 11. Select Content to Retrieve Screen

4. On the Select content to retrieve... screen, select **Retrieve Some Files** to display the retrieve files selection box (see Figure 12 on page 23).
5. Navigate through the folder structure to find the files you want. Also, you can use the search box by typing the name (or partial name) of the file or folder:
   - Click the appropriate file category button to list the files by category:
     - **Pictures**
     - **Music**
     - **Movies**
     - **Documents**
     - **Other**
     - **Mail**
   - Select the view icon to list individual files.
   - Type all or part of the file name in the search box to locate the file and press **Enter** to initiate the search. To eliminate the search filter, delete all of the text in the search box and press **Enter.**
   - Select the check box for the file or folder that you want to retrieve.
6. Click **Start Retrieving**.

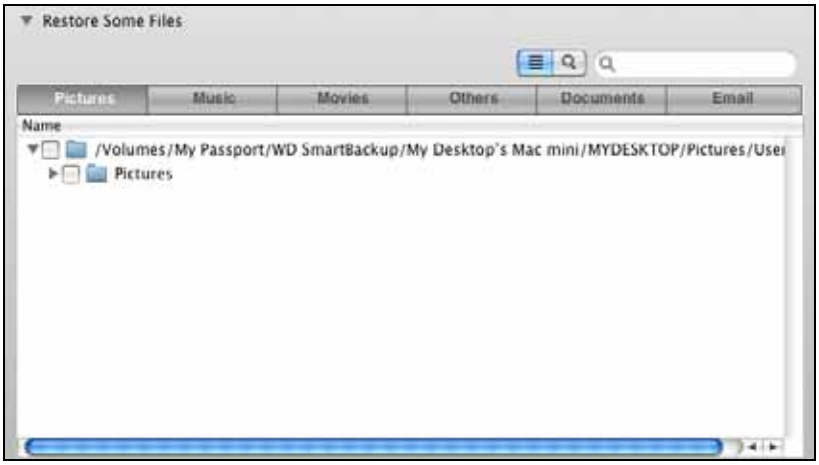

Figure 12. Retrieve Files Selection Box

7. During the retrieve:
   - The Retrieve screen displays a progress bar and a message indicating the amount of data that has been copied to the specified retrieve location.
   - A **Cancel Retrieving** button is available for you to stop the retrieve.
8. A **Retrieval accomplished** message signifies completion of the retrieve.

   A **Partial retrieve accomplished** message means the file you selected for the retrieve was not copied to the specified retrieve location. In this case, either a:
   - **Files Not Retrieved** message provides the number of files that were not retrieved and a link to a failed-to-retrieve information screen. Click the **View files** link to see the list of files and the reasons they were not retrieved.
   - **Destination is full** message means that your computer does not have sufficient disk space to complete the retrieve.

Retrieving a Folder

To retrieve a folder from your drive, and all of the content within a folder, which may be across multiple categories, in the retrieve files selection box (Figure 12), right-click the folder of interest and choose **Select folder in all content categories**.

Retrieving an Earlier Version of a File or Deleted Files

In the retrieve files selection box (Figure 12), check the **Show deleted files** box and/or the **Show older files** box. Now, when selecting content to retrieve, you can select individual files that were overwritten or deleted. Likewise, retrieving entire folders in this mode will retrieve older versions and deleted files as well.

Retrieving All Your Content

On the Select content to retrieve... screen (see Figure 11 on page 22), choose the **Retrieve all Files** option, which retrieves files across all categories and copies them to either their original locations or the Retrieve Contents folder.

5

Locking and Unlocking Your Drive

This chapter includes the following topics:

Password Protecting Your Drive
Unlocking Your Drive
Turning Off the Drive Lock Feature
Changing Your Password

Password Protecting Your Drive

You should password protect your drive if you are worried that someone else will gain access to your drive and you do not want them to see your files on the drive.

CAUTION! The WD SmartWare software uses your password to electronically lock and unlock your drive. If you forget your password, you will not be able to access the data that is on your drive or write new data to it. You will have to erase the drive before you can use it again.

You can reach the Set Security dialog for password management from the WD SmartWare software **Settings** tab, Drive Settings screen. There, you can:

- Create a password
- Change a password
- Eliminate the need for a password

To create a password and keep others from accessing the files on your drive:

1. Click the **Settings** tab to display the Settings screen (see Figure 7 on page 17).
2. Click **Set Up Drive** to display the Drive Settings screen (see Figure 13 on page 25).
3. Click **Security** to display the Set Security dialog:

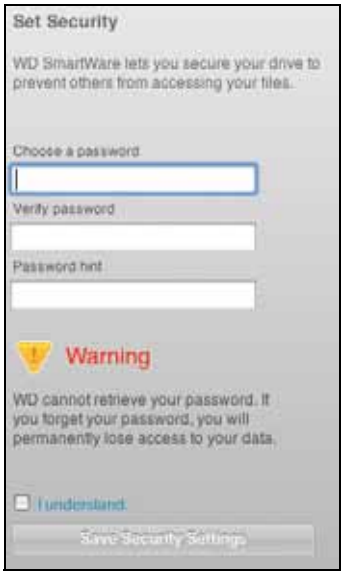
Set Security
WD SmartWare lets you secure your drive to prevent others from accessing your files.
Choose a password
Verify password
Password hint
Warning
WD cannot retrieve your password. If you forget your password, you will permanently lose access to your data.
I understand
Save Security Settings

4. Type your password in the **Choose a password** box.

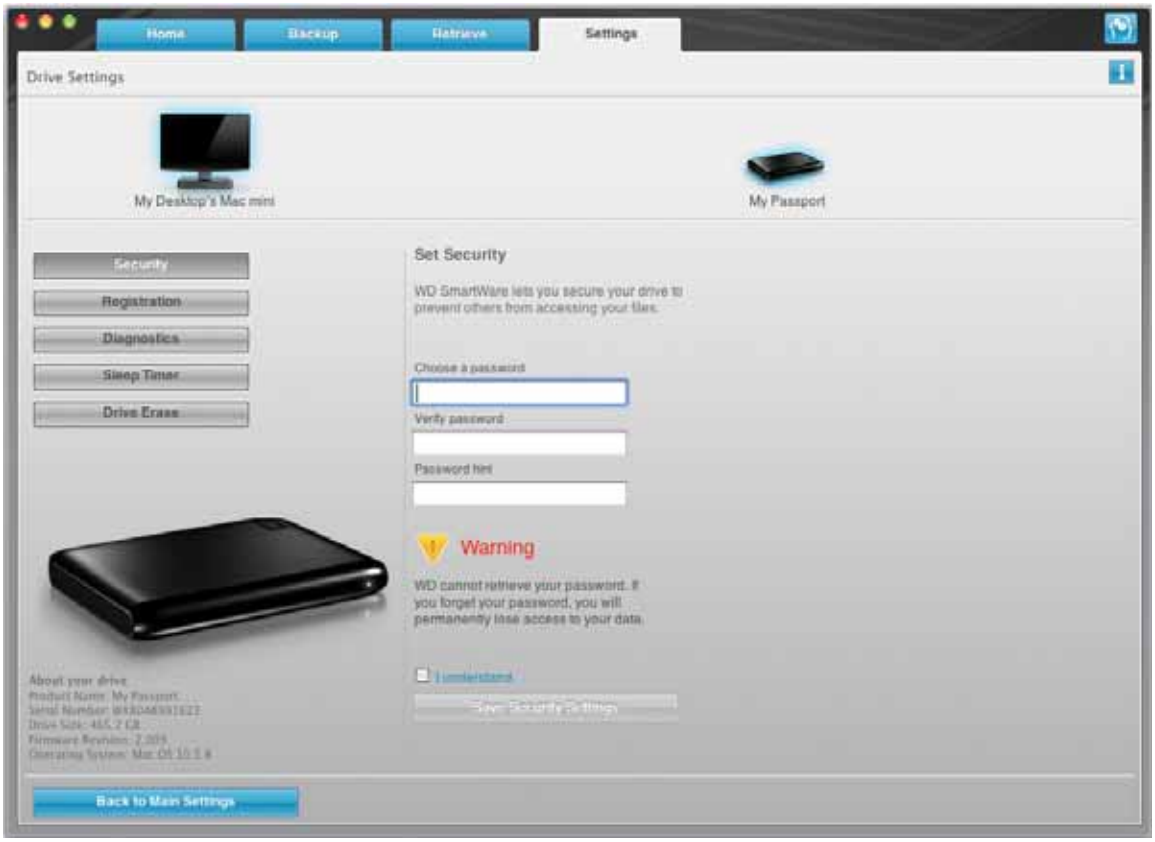

Figure 13. Drive Settings Screen

5. Retype your password in the **Verify password** box.
6. Type a hint to help remind yourself of your password in the **Password hint** box.
7. Read the warning about the possibility of data loss if you forget your password.
8. Click the **I understand** check box to signify that you accept the risk.
9. Click **Save Security Settings** to save your password and enable password protection for your drive.

CAUTION! After creating a password, the drive remains *unlocked* for as long as you continue your current work session. Then, the WD SmartWare software:

- **Locks the drive when you shut down your computer, disconnect your drive, or the computer goes into the sleep mode**
- **Requires you to type your password to unlock the drive when you restart your computer or reconnect your drive**

Unlocking Your Drive

After you have created a password to keep others from accessing the files on your drive, you will have to type your password to unlock the drive whenever:

- You shut down and restart your computer
- You disconnect and reconnect the drive to your computer
- Your computer exits the sleep mode

You will have to do this even if you do not have the WD SmartWare software installed on your computer.

Unlocking Your Drive with the WD SmartWare Software

The procedure for unlocking your drive with the WD SmartWare software can be automatic or manual, depending on whether the **Please provide your password** prompt appears or not.

Automatically. Whenever you shut down and restart your computer, or disconnect and reconnect the drive to your computer, the WD SmartWare software displays the **Please provide your password** prompt:

To unlock your drive:

1. Type your password in the **Password** box.
2. Click **Unlock** to unlock your drive and enable the WD SmartWare software.

Manually. If your computer goes into sleep mode, an unlock screen might not display when you reactivate it. To unlock the drive, you can use either the:

- WD Unlocker VCD as described in “Unlocking Your Drive Without the WD SmartWare Software” on page 27
- WD SmartWare icon

To unlock the drive manually, using the WD SmartWare icon:

1. Click the WD SmartWare icon in the bar at the top-right corner of the screen.
2. Select the My Passport drive and then click **Unlock Drive**:

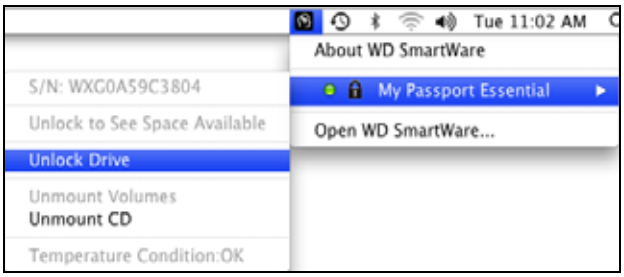

3. Type your password in the **Password** box and click **Unlock o**n the WD SmartWare Drive Unlock screen:

4. At the **Your drive is now unlocked** prompt, click **Exit** to close the WD SmartWare Drive Unlock screen.

Unlocking Your Drive Without the WD SmartWare Software

Whenever you connect your password-protected drive to a computer that does not have the WD SmartWare software installed, you can use the WD SmartWare Drive Unlock utility to unlock the drive there. The WD SmartWare software provides the Drive Unlock utility on a “virtual” CD drive (VCD) that appears on your desktop:

To unlock the drive without the WD SmartWare software installed:

1. Double-click the WD Unlocker VCD icon and double-click the Drive Unlock icon on the screen that appears:

2. Type your password in the **Password** box:

3. Click **Unlock** to unlock your drive.
4. Click **Exit** at the **Your drive is now unlocked** prompt to close the WD SmartWare Drive Unlock utility screen.

Turning Off the Drive Lock Feature

To remove password protection from your drive:

1. Click **Security** on the Drive Settings screen (see Figure 13 on page 25) to display the Your Drive is Secure dialog:

2. Type your password in the **Password** box.
3. Select the **Remove security** option.
4. Click **Update Security Settings** to remove password protection from your drive and redisplay the Set Security dialog.

Changing Your Password

To change your password:

1. On the Your Drive is Secure dialog, type your current password in the **Password** box.
2. Select the **Change password** option.
3. Type your new password in the **New password** box.
4. Retype your new password in the **Verify password** box.
5. Type a hint to help remind yourself of your new password in the **Password hint** box.
6. Click **Update Security Settings** to change your password.

6

Managing and Customizing Your Drive

This chapter includes the following topics:

Using the WD SmartWare Icon
Opening the WD SmartWare Software
Checking Drive Status
Safely Dismounting the Drive
Customizing Your Software Settings
Customizing Your Drive Settings
Uninstalling the WD SmartWare Software
Restoring the WD SmartWare Software and Disk Image

Using the WD SmartWare Icon

After you have installed the WD SmartWare software, the WD SmartWare icon displays in the bar at the top-right corner of the screen:

By clicking the icon you can:

- Open the WD SmartWare software
- Check the drive status
- Safely dismount the drive

The following sections describe how to use the icon and other ways to do these things.

Opening the WD SmartWare Software

If the WD SmartWare software does not open automatically, you can restart it by:

- Clicking the WD SmartWare icon and selecting **Open WD SmartWare**:

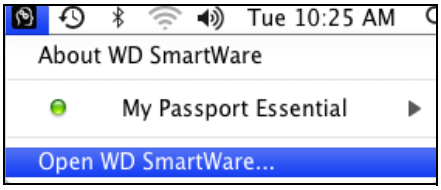

- Double-clicking **WD SmartWare** in the Applications list:

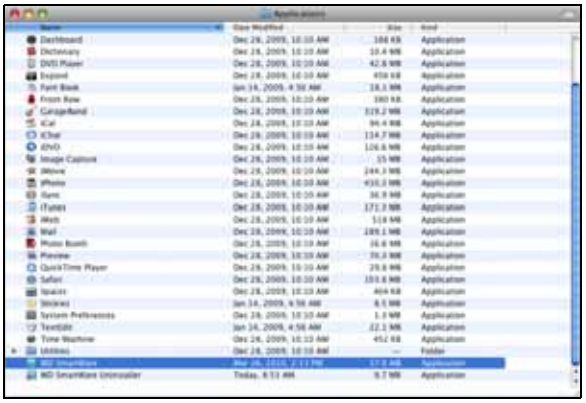

Checking Drive Status

Use the WD SmartWare icon to determine whether the drive is encrypted (locked), how full the drive is, the drive's serial number, and the temperature condition of the drive:

1. Click the WD SmartWare icon to display a list of drives and select the My Passport drive:

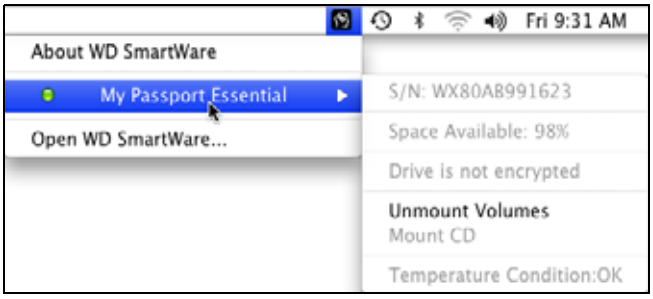

2. If the drive is unlocked (not encrypted), the submenu shows the serial number of the drive, the space available, and temperature condition.

   If the drive is locked:

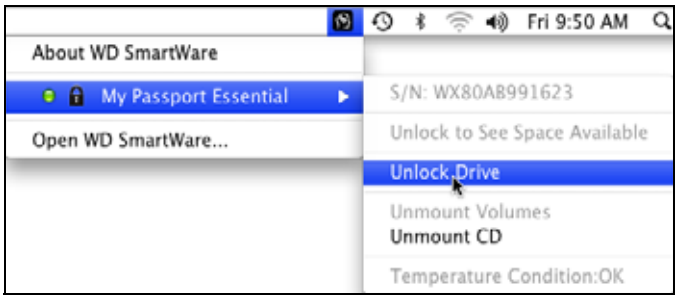

   a. Click **Unlock Drive** on the submenu to open the WD SmartWare Drive Unlock screen:

   b. Type your password in the **Password** box and click **Unlock**.

   c. At the **Your drive is now unlocked** prompt click **Exit** to close the WD SmartWare Drive Unlock screen.

   Repeat step 1 to see the drive status.

Safely Dismounting the Drive

You can safely dismount the drive from a Mac in two ways, using either the:

- WD SmartWare icon
- My Passport icon

CAUTION! To prevent data loss, close all active windows and applications before shutting down or removing the drive.

Using the WD SmartWare Icon

To safely dismount the drive using the WD SmartWare icon:

1. Click the WD SmartWare icon to display a list of drives.
2. Select the My Passport, and then on the submenu, select **Unmount Volumes**:

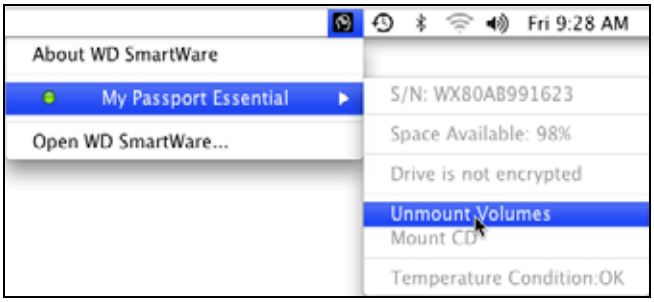

If the drive has more than one volume, a prompt asks you to select the volume.

You might hear the drive power down.

3. Wait for the drive icon to disappear from the desktop before disconnecting the drive from the computer.

Using the My Passport Icon

To safely dismount the drive using the My Passport icon:

1. Right- or control-click the My Passport icon on the desktop and select **Eject "MY PASSPORT"**:

You might hear the drive power down.

2. Wait for the drive icon to disappear from the desktop before disconnecting the drive.

Customizing Your Software Settings

The WD SmartWare software makes it easy for you to quickly customize its own software settings for the best possible performance with your drive by:

- Specifying the number of backup versions that you want to keep for each file
- Inhibiting backups until times when your computer is idle
- Specifying a unique folder on your computer to store files retrieved from your drive
- Automatically:
  - Displaying the WD SmartWare Home screen whenever you connect your drive to your computer
  - Checking for WD SmartWare software updates

To customize your WD SmartWare software settings for the best possible performance with your drive, on the Software Settings screen (see Figure 8 on page 18):

IF you want to . . .	THEN click . . .	AND see . . .
Change the number of backup versions to keep for each file,	**Set File History**	"Specifying the Number of Backup Versions" on page 18.
Enable anytime backups or inhibit them until your computer is idle,	**Backup Speed**	"Pausing Backups Until Your Computer is Idle" on page 19.
Specify a path to a different retrieve folder,	**Retrieve Folder**	"Specifying a Different Retrieve Folder" on page 32.
Change the options that: • Display the WD SmartWare Home screen whenever you reconnect your WD SmartWare drive to your computer • Check for software updates	**Preferences**	"Setting the Preferences Options" on page 33.

Specifying a Different Retrieve Folder

When you start a retrieve, you can choose whether you want to store the retrieved files in either:

- Their original locations on your computer
- A Retrieved Content folder

By default, the WD SmartWare software creates and uses a Retrieved Content subfolder in your MYDESKTOP folder. To specify a different folder:

1. Either create a new folder or determine which existing folder you want to use.
2. On the Software Settings screen (see Figure 8 on page 18), click **Retrieve Folder** to display the Set Retrieve Folder dialog:

Set Retrieve Folder
The current retrieve folder is at:
/Users/MYDESKTOP/Retrieved Contents
If you would like to change this folder, please enter the new location below.
Browse...
Apply

3. Click **Browse** and use the browse function to identify the new retrieve folder.
4. Click **Apply** to save and implement the new retrieve folder.

Setting the Preferences Options

When enabled, each time you reconnect your My Passport drive to your computer, the Preferences options:

- Display the WD SmartWare Home screen.

  This is the default configuration of the WD SmartWare software, and it is recommended when you routinely perform a number of backups or retrieves each day. Otherwise, you might want to disable this option and open the WD SmartWare Home screen whenever you need it.

- Check for software updates.

  This ensures that you are always using the most-recent software version.

To enable or disable the Preferences options:

1. On the Software Settings screen (see Figure 8 on page 18), click **Preferences** to display the Set Preferences dialog:

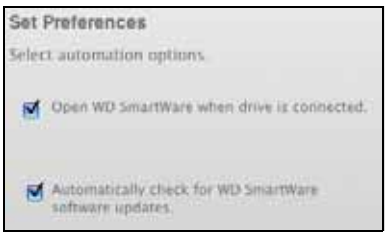
Set Preferences
Select automation options.
Open WD SmartWare when drive is connected.
Automatically check for WD SmartWare software updates.

2. Select or clear the check boxes to enable or disable the Preferences options:
   - **Open WD SmartWare when drive is connected**
   - **Automatically check for WD SmartWare software updates**

Customizing Your Drive Settings

The WD SmartWare software makes it easy for you to quickly customize the settings of your drive for the best possible performance:

- Security—Create, modify, and disable passwords that keep others from accessing the files on your drive.
- Registration—Register your drive to receive free technical support during the warranty period and find out about software updates, product enhancements, and price discount opportunities.
- Diagnostics—Run diagnostics and status checks to make sure your drive is working properly.
- Sleep Timer—Turn your drive off during periods of extended inactivity to conserve power and extend the life of the drive.
- Drive Erase—Erase all of the contents on the drive, including any password that has been set.

To customize your drive settings for the best possible performance with the WD SmartWare software, on the Drive Settings screen (see Figure 13 on page 25):

IF you want to . . .	THEN click . . .	AND see . . .
Use a password to keep others from accessing the files on your drive,	**Security**	"Password Protecting Your Drive" on page 24.
Change your password,	**Security**	"Changing Your Password" on page 28.
Remove password protection from your drive,	**Security**	"Turning Off the Drive Lock Feature" on page 28.
Register your drive to receive free technical support during the warranty period and be kept up-to-date on the latest WD products,	**Registration**	"Registering Your Drive" on page 34.
Run drive diagnostics and status checks,	**Diagnostics**	"Checking Drive Health" on page 40.
Specify an inactive time interval to turn off your drive,	**Sleep Timer**	"Setting the Drive Sleep Timer" on page 35.
Erase your drive so you can retrieve the space and start over with a fresh set of backups,	**Drive Erase**	"Erasing Your Drive" on page 35.

Registering Your Drive

The WD SmartWare software uses your computer's Internet connection to register your drive. To register your drive to receive free technical support during the warranty period and be kept up-to-date on the latest WD products:

1. Make sure that your computer is connected to the Internet.
2. On the Drive Settings screen (see Figure 13 on page 25), click **Registration** to display the Register Drive dialog:

3. Type your first name in the **First name** box.
4. Type your last name in the **Last name** box.

5. Type your e-mail address in the **E-mail address** box.
6. Select your language in the **Preferred language** box.
7. Select or clear the **Yes, I want to receive communication...** check box to specify whether or not you want to receive e-mail notifications about software updates, product enhancements, and price discount opportunities.
8. Click **Register Drive** to register your drive.

Setting the Drive Sleep Timer

The drive sleep timer turns off the power to your drive after a certain period of inactivity to conserve power and minimize long-term wear on the drive.

To specify the inactivity period for the drive:

1. On the Drive Settings screen (see Figure 13 on page 25), click **Sleep Timer** to display the Set Sleep Timer dialog:

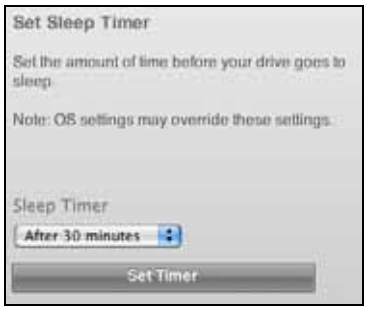
Set Sleep Timer
Set the amount of time before your drive goes to sleep
Note: OS settings may override these settings
Sleep Timer
After 30 minutes
Set Timer

2. In the **Sleep Timer** box, select the inactivity time interval at which you want to turn off the drive.
3. Click **Set Timer** to save and implement your sleep timer setting.

Erasing Your Drive

CAUTION! Erasing your drive permanently deletes all of the data on your drive. Always make sure that you no longer need any of the data on your drive before erasing the drive.

Note: Erasing your drive also deletes the WD SmartWare software and all of the support files, utilities, online help and user manual files. You can download these to restore your My Passport to its original configuration after erasing the drive.

The WD SmartWare software provides two ways to erase your drive, depending on whether your My Passport drive is locked or not:

IF your drive is . . .	AND you . . .	THEN see . . .
Not locked,	*Want* to erase the drive,	"Using the Drive Settings Drive Erase Function" in the following section.
Locked,	Have forgotten or lost your password and *must* erase the drive,	"Using the Drive Unlock Utility" on page 37.

Using the Drive Settings Drive Erase Function. To erase your My Passport when the drive is not locked:

1. On the Drive Settings screen (see Figure 13 on page 25), click **Drive Erase** to display the Erase Drive dialog:

2. Read the warning about the loss of data if you erase your drive.
3. Click the **I understand** check box to signify that you accept the risk.
4. Click **Drive Erase** to erase your drive.

After the drive erase operation completes, go to *support.wdc.com* and see Knowledge Base Answer ID #5419 for information about downloading and restoring the WD SmartWare software and disk image on your My Passport drive.

Note: Erasing your drive also removes your password. If you used a password to protect your drive, you will need to do it again after restoring the WD SmartWare software and disk image. (See “Password Protecting Your Drive” on page 24.)

Using the Drive Unlock Utility. To erase your My Passport when the drive is locked and you have forgotten or lost your password:

1. If you do not see a prompt to provide your password, then either:
   - Click the My Passport image above the **Drive is locked** prompt to display the **Please provide your password** prompt:

   - Double-click the WD Unlocker VCD icon and double-click the Drive Unlock icon on the screen that appears:

   The WD SmartWare Drive Unlock utility displays:

2. Make five attempts to unlock the drive by:
   a. Typing a password in the **Password** box.
   b. Clicking **Unlock**.

3. The fifth invalid password attempt displays the **There were too many password recovery attempts** prompt:

4. Read the warning about the loss of data if you erase your drive.
5. Click the **I understand** check box to signify that you accept the risk.
6. Click **Drive Erase** to erase your drive.

After the drive erase operation completes, go to *support.wdc.com* and see Knowledge Base Answer ID #5419 for information about downloading and restoring the WD SmartWare software and disk image on your My Passport drive.

Note: Erasing your drive also removes your password. If you still want to use a password to protect your drive, you will need to do it again after restoring the WD SmartWare software and disk image. (See “Password Protecting Your Drive” on page 24.)

Uninstalling the WD SmartWare Software

Important: You can easily uninstall the software. However, you will need to restart the backup job manually after reinstalling the software as uninstalling deletes all existing backup job configurations. (See “Backing Up Your Computer Files” on page 13.)

To uninstall the WD SmartWare software:

1. Double-click the My Passport icon on the desktop or WD SmartWare in the Applications list and double-click the Extras folder on the screen that displays:

2. Double-click the WD SmartWare Uninstaller icon:

3. Click **Uninstall** on the WD SmartWare Uninstall screen.

Restoring the WD SmartWare Software and Disk Image

In addition to deleting all of the data on your My Passport drive, erasing or reformatting the drive also removes the WD SmartWare software and all of the support files, utilities, online help and user manual files.

If you ever need to remove and reinstall the WD SmartWare software on your computer, or move the drive to another computer and install the software there, you will need to restore the WD SmartWare software and disk image on your My Passport drive. To do this, after you have erased or reformatted the drive, go to *support.wdc.com* and see Knowledge Base Answer ID #5419.

7

Checking Drive Health

The data files on your My Passport drive are important to you. The WD SmartWare software has several built-in diagnostic tools to help make sure that your drive is performing well. Run one of the following tests if you are concerned that your drive is not operating properly:

Diagnostic Tool	Description
Quick S.M.A.R.T. Status Check	S.M.A.R.T. is a failure-prediction function that continuously monitors key internal performance attributes of the drive. A detected increase in drive temperature, noise, or read/write errors, for example, can provide an indication that the drive might be approaching a serious failure condition. With advanced warning, you could take precautionary measures, like moving your data to another drive, before a failure occurs. The result of a quick S.M.A.R.T. status check is a pass or fail evaluation of the drive's condition. The S.M.A.R.T. status check completes within a second or two.
Quick Drive Test	Your My Passport drive has a built-in Data Lifeguard diagnostic utility that tests the drive for error conditions. The quick drive test checks the drive for major performance problems. The result of a quick drive test is a pass or fail evaluation of the drive's condition. The quick drive test can take several minutes to complete.
Complete Drive Test	The most comprehensive drive diagnostic is the complete drive test. It methodically tests every sector for error conditions, and inserts bad-sector markers as required. The complete drive test can take several hours to complete, depending on the size and data configuration of your drive.

The best time to run the drive diagnostics and status checks is on a regular basis, before you encounter any problems with your drive. And, because they are so fast, running the quick S.M.A.R.T. status check and the quick drive test provides a high level of assurance with minimal inconvenience. Then, run all three whenever you encounter disk error conditions while backing up or retrieving files.

To run drive diagnostics and status checks:

1. On the Drive Settings screen (see Figure 13 on page 25), click **Diagnostics** to display the Diagnostics dialog:

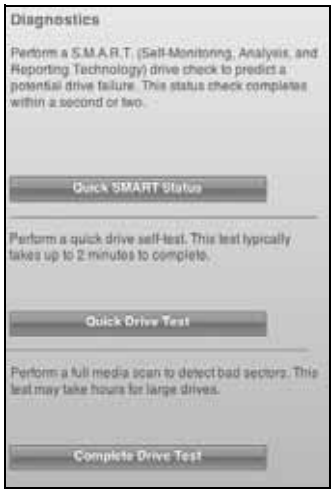
Diagnostics
Perform a S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) drive check to predict a potential drive failure. This status check completes within a second or two.
Quick SMART Status
Perform a quick drive self-test. This test typically takes up to 2 minutes to complete.
Quick Drive Test
Perform a full media scan to detect bad sectors. This test may take hours for large drives.
Complete Drive Test

2. Click the button for the test that you want to run:
   - **Quick SMART Status**
   - **Quick Drive Test**
   - **Complete Drive Test**

8

Using the Drive with Windows

The My Passport drive is preformatted as a single HFS+J partition for compatibility with Mac OS X operating systems. To use the drive on Windows operating systems, you must first:

- Reformat the drive to a single NTSF partition
- Restore the WD SmartWare software and disk image

This chapter includes the following topics:

Reformatting the Drive
Restoring the WD SmartWare Software and Disk Image
Installing the Drive on Windows Computers
Getting Started with the WD SmartWare Software
Using the WD SmartWare Icon
Opening the WD SmartWare Software
Checking Drive Status
Monitoring Icon Alerts
Disconnecting the Drive Safely
Enabling the Backup and Retrieve Functions
Unlocking the Drive
Uninstalling the WD SmartWare Software
Getting Started Without the WD SmartWare Software

Reformatting the Drive

CAUTION! Reformatting the drive erases all its contents. If you have already saved files on the drive, be sure to back them up before reformatting it.

Go to *support.wdc.com* and refer to the appropriate Knowledge Base Answer ID for information about reformatting a Mac drive:

- 3645 for Windows XP
- 3647 for Windows Vista
- 3322 for Windows 7

See “Troubleshooting” on page 55 for more information about reformatting a drive.

Restoring the WD SmartWare Software and Disk Image

After you have reformatted your My Passport drive for use on Windows computers, go to *support.wdc.com* and see Knowledge Base Answer ID #5419 for information about downloading and restoring the Windows version of the WD SmartWare software and disk image on your My Passport drive.

Installing the Drive on Windows Computers

After you have reformatted your drive for use on a Windows computer and downloaded and restored the Windows version of the WD SmartWare software and disk image:

1. Turn on your computer.
2. Connect the drive to your computer using either:
   - The USB micro cable as shown in Figure 3 on page 5.
   - The optional My Passport dock as shown in Figure 4 on page 6.
3. After you physically connect the drive, verify that the new My Passport drive appears under My Computer in Windows Explorer.
4. If a Found New Hardware screen appears, click **Cancel** to close it:

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).
Read our privacy policy
Can Windows connect to Windows Update to search for software?
Yes, this time only
Yes, now and every time I connect a device
No, not this time
Click Next to continue.
< Back
Next >
Cancel

Windows XP

Found New Hardware
Windows needs to install driver software for your WD SES Device USB Device
Locate and install driver software (recommended)
Windows will guide you through the process of installing driver software for your device.
Ask me again later
Windows will ask again the next time you plug in your device or log on.
Don't show this message again for this device
Your device will not function until you install driver software.
Cancel

Windows Vista or Windows 7

The WD SmartWare software will install the proper driver for your My Passport drive.

5. Several different screens might also appear, depending on your computer's operating system:

IF your operating system is . . .	THEN . . .
Windows XP	Proceed to step 6.
Windows Vista or Windows 7	Skip to step 8.

6. For Windows XP, one or two screens might appear, depending on whether the AutoRun (AutoPlay) function is enabled or disabled:

IF AutoRun (AutoPlay) is . . . on your computer,	THEN . . .
Enabled	Proceed to step a.
Disabled	Skip to step b.

   a. On Windows XP with AutoRun (AutoPlay) enabled, the Welcome to WD SmartWare screen displays (see Figure 14 on page 44).

   b. On Windows XP with AutoRun (AutoPlay) disabled, click to open the My Passport drive listing in Windows Explorer and double-click the WD SmartWare.exe file to display the Welcome to WD SmartWare screen (see Figure 14 on page 44).

Welcome to WD SmartWare
What would you like to do?
Install WD SmartWare
Install WD SmartWare Backup, Retrieve, Drive Lock, and Drive Management features.
Install Drive Settings
Install only WD Drive Lock and Drive Management settings.
Do Not Install
Do not install WD SmartWare.

Note: If a Flash Player is installed on your computer, the screen is animated.

Figure 14. Welcome to WD SmartWare Screen

7. Continue to "Getting Started with the WD SmartWare Software" on page 45.

If you do not want to install the WD SmartWare software, go to "Getting Started Without the WD SmartWare Software" on page 54 instead.

8. For Windows Vista or Windows 7, two or three screens might appear, depending on whether the AutoRun (AutoPlay) function is enabled or disabled:

IF AutoRun (AutoPlay) is . . . on your computer,	**THEN . . .**
Enabled	Proceed to step a.
Disabled	Skip to step b on page 45.

a. For Windows Vista or Windows 7 with AutoRun (AutoPlay) enabled:

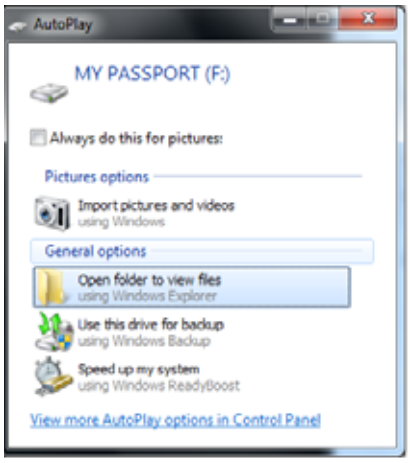

Click **Open folder to view files** on the AutoPlay screen and double-click the WD SmartWare.exe file to display the Welcome to WD SmartWare screen (see Figure 14).

b. For Windows Vista or Windows 7 with AutoRun (AutoPlay) disabled, open **Computer**, click to open the My Passport drive listing in Windows Explorer and double-click the WD SmartWare.exe file to display the Welcome to WD SmartWare screen (see Figure 14 on page 44).

9. Continue to "Getting Started with the WD SmartWare Software" on page 45.

If you do not want to install the WD SmartWare software, go to "Getting Started Without the WD SmartWare Software" on page 54 instead.

Getting Started with the WD SmartWare Software

To get started with WD SmartWare software:

1. The **What would you like to do?** prompt on the Welcome to WD SmartWare screen provides three options for getting started with WD SmartWare software:

IF you want to install . . .	THEN click . . .
The full version of the WD SmartWare software, with continuous automatic backup, retrieve, drive lock password protection, and drive maintenance features and: • Run your first backup, • Password protect or register your drive,	**Install WD SmartWare**.
Only the WD SmartWare software drive lock password protection and drive management features, and password protect or register your drive,	**Install Drive Settings**.
The full version of the WD SmartWare software and retrieve files that you have already backed up to your My Passport drive on another computer,	**Retrieve a backup**.

2. Read the license agreement and click **Accept** to continue.

3. Wait for the software installation to complete. This could take several minutes.

4. After the software installation completes:

IF you clicked . . . at step 1,	THEN the WD SmartWare software displays . . .
Install WD SmartWare	The initial Backup screen for performing your first backup (see Figure 15 on page 47). Here you can either: • Run your first backup—See "Backing Up Your Computer Files" on page 13 before clicking **Run Backup** and then proceed to step 5. • Skip the backup for now and display the initial Drive Settings screen (Figure 16 on page 47)—See "Password Protecting Your Drive" on page 24 and "Registering Your Drive" on page 34 before clicking **Skip Backup** and then skip to step 6. *Note:* In this case, the initial Drive Settings screen includes a **Return to Backup** button for returning to the initial Backup screen.
Install Drive Settings	The initial Drive Settings screen for securing and registering your drive (Figure 16 on page 47). a. See: • "Password Protecting Your Drive" on page 24 • "Registering Your Drive" on page 34 b. Skip to step 6.
Retrieve a backup	The Home screen for accessing all WD SmartWare functions: a. See Figure 7 on page 10 and "Retrieving Backed Up Files" on page 20. b. This completes the getting started procedure after selecting **Retrieve a backup**.

Note: The initial Backup and Drive Settings screens only appear one time—the first time you install the WD SmartWare software on your computer. After that, launching the software displays the Home screen so you can choose what you want to do.

5. After completing your initial backup, click **Continue** on the initial Backup screen to display the WD SmartWare Home screen (Figure 5 on page 11).

This completes the getting started procedure after selecting **Install WD SmartWare**.

6. After password protecting or registering your drive, click **Finish** to close the initial Drive Settings screen.

This completes the getting started procedure after selecting **Install Drive Settings**.

In this case, however:

- Opening the WD SmartWare software displays the drive management Home screen (see Figure 17 on page 48) with the Settings tab for performing all drive management functions (see "Customizing Your Drive Settings" on page 41).
- Clicking the **Settings** tab displays the drive management Drive Settings screen with a **Preferences** button that you can use to enable the WD SmartWare Backup and Retrieve functions (see Figure 18 on page 48 and "Enabling the Backup and Retrieve Functions" on page 51).

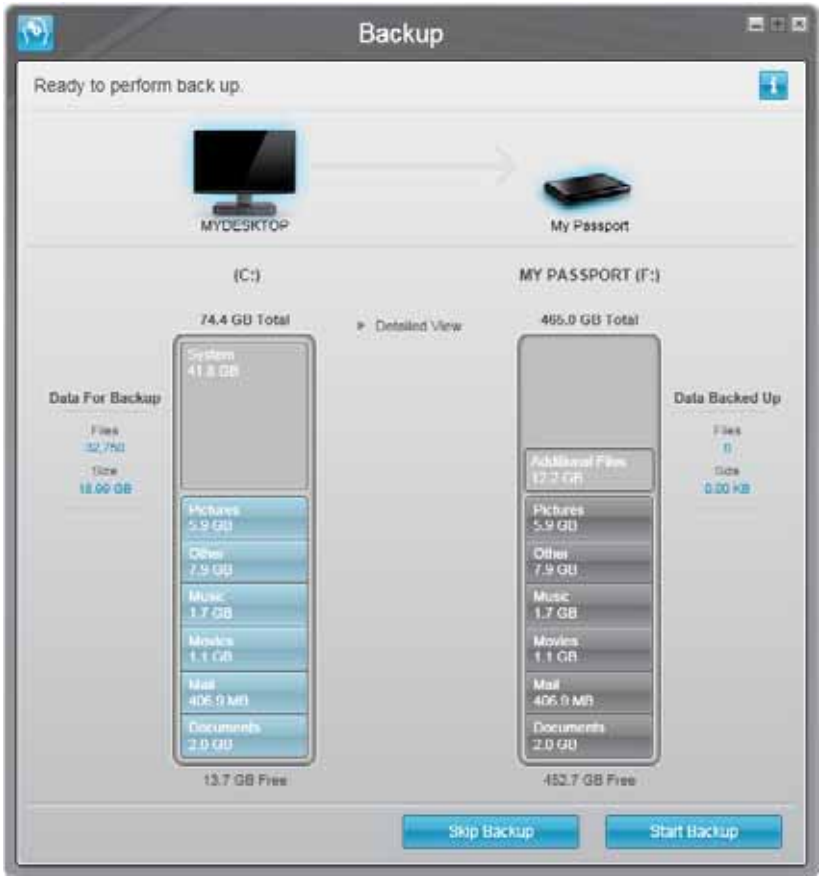

Figure 15. Initial Backup Screen

Drive Settings
Set security for your drive.
Security
Registration
Set Security
WD SmartWare lets you secure your drive to prevent others from accessing your files.
Choose a password
Verify password
Password hint
Warning
WD cannot retrieve your password. If you forget your password, you will permanently lose access to your data.
I understand.
Save Security Settings
About your drive
Product Name: My Passport
Serial Number: WX80AB991623
Drive Size: 465 GB
Operating System: Windows XP Service Pack 3
Firmware Revision: 2.009
Finish

Figure 16. Initial Drive Settings Screen

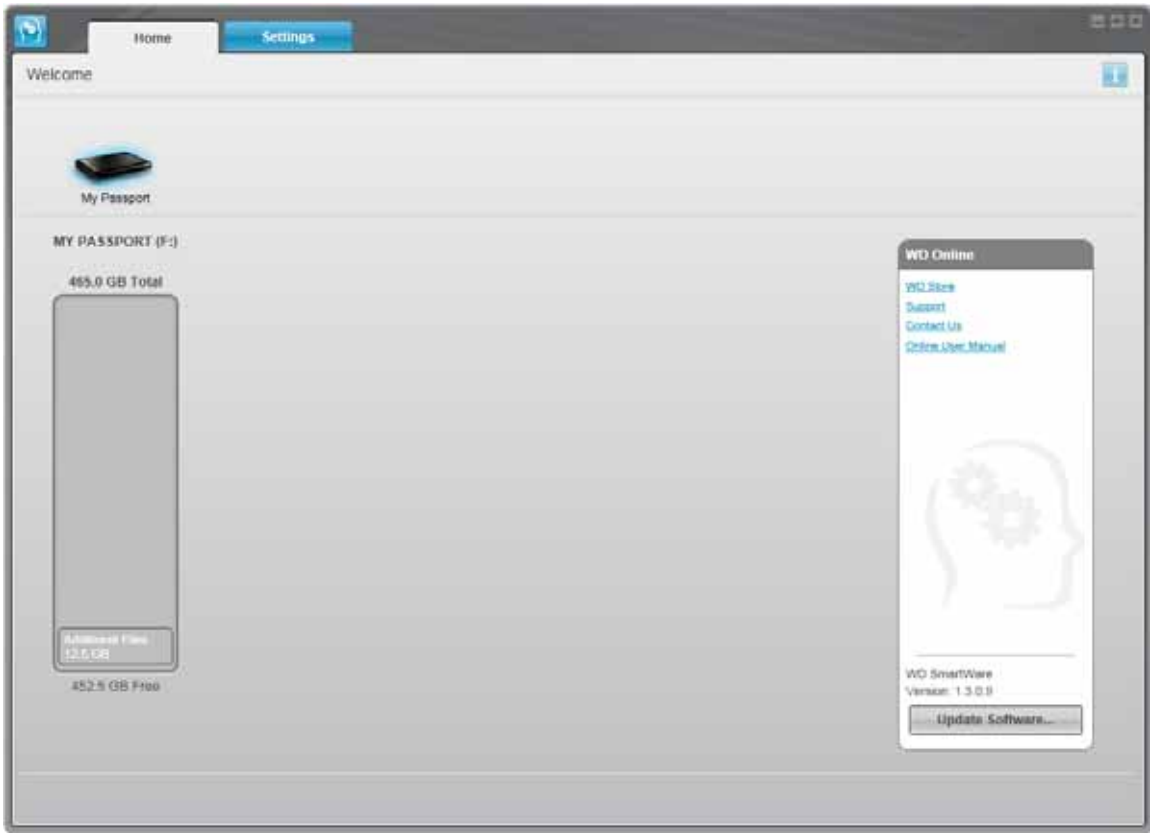

Figure 17. Drive Management Home Screen

Figure 18. Drive Management Drive Settings Screen

Using the WD SmartWare Icon

After you have installed the WD SmartWare software (see “Installing the Drive on Windows Computers” on page 43), the WD SmartWare icon displays in the Windows task bar.

By clicking the icon you can:

- Open the WD SmartWare software
- Check the drive status
- Monitor icon alerts
- Safely disconnect the drive

The following sections describe how to use the icon and other ways to do these things.

Opening the WD SmartWare Software

If the WD SmartWare software does not start automatically, you can start it by:

- Clicking **Start** > **(All) Programs** > **WD SmartWare** > **WDSmartWare**.
- Double-clicking the WD SmartWare icon in the task bar.

  Note: You can also left- or right-click the WD SmartWare icon in the task bar and select **WD SmartWare**.

The WD SmartWare Home screen displays, see:

- Figure 5 on page 11
- Figure 17 on page 48

In the Content Gauge for your computer’s hard drive, all of your files that are available for backup are shown against a blue background in six categories where:

This file category	Includes files with these extensions
Documents	.doc, .txt, .htm, .html, .ppt, .xls, .xml, and other document extensions
Mail	.mail, .msg, .pst., and other mail extensions
Music	.mp3, .wav, .wma, and other music extensions
Movies	.avi, .mov, .mp4, and other movie extensions
Pictures	.gif, .jpg, .png, and other picture extensions
Other	Others that do not belong in the five main categories

For a complete list of all included file extensions, search for Answer ID 3644 in the WD Knowledge Base at *support.wdc.com*.

Checking Drive Status

Hover the pointer over the WD SmartWare icon to see the drive capacity used and the drive temperature condition, and to find out if the drive is locked:

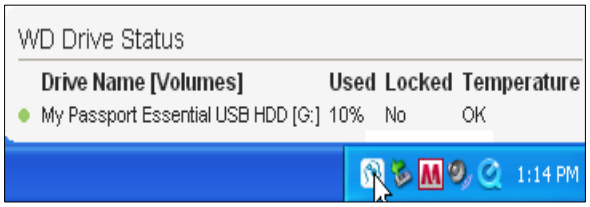

Monitoring Icon Alerts

The WD SmartWare icon in the system tray flashes to indicate drive status as follows:

IF the WD SmartWare icon flashes . . .	THEN the drive might be . . .
Green and white,	Locked or in a format that the WD SmartWare software does not understand (non-Windows format in a Windows environment).
Red and white,	Overheated. Power down the drive and let it cool for 60 minutes. Power it back on, and if the problem persists, contact WD Support.

Disconnecting the Drive Safely

CAUTION! To prevent data loss, close all active windows and applications before shutting down or removing the drive.

1. Right-click the WD SmartWare icon in the system tray, and then click **Safely remove My Passport Essential USB HDD**:

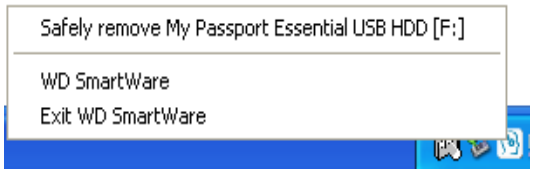

   You might hear the drive power down.

2. Wait for the power/activity LED to turn off before disconnecting the drive from the computer.

Enabling the Backup and Retrieve Functions

If you selected **Install Drive Settings** at the **What would you like to do?** prompt on the Welcome to WD SmartWare screen and now want to enable the Backup and Retrieve functions:

1. On the drive management Drive Settings screen (see Figure 18 on page 48), click **Preferences** to display the Set Preferences dialog:

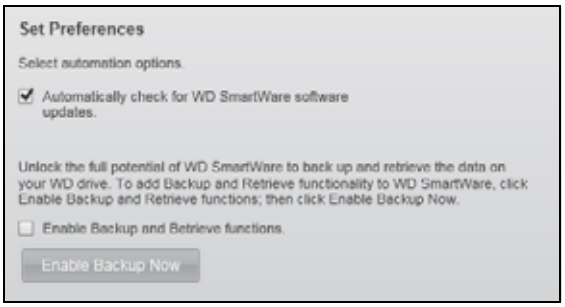
Set Preferences
Select automation options.
Automatically check for WD SmartWare software updates.
Unlock the full potential of WD SmartWare to back up and retrieve the data on your WD drive. To add Backup and Retrieve functionality to WD SmartWare, click Enable Backup and Retrieve functions; then click Enable Backup Now.
Enable Backup and Retrieve functions.
Enable Backup Now

2. Select the **Enable Backup and Retrieve functions** check box.
3. Click **Enable Backup Now** to:
   - Add the **Backup** and **Retrieve** tabs to the Home screen display
   - Add the **Set Up Software** and **Set Up Drive** options to the Settings screen
   - Remove the **Preferences** option from the Drive Settings screen

Unlocking the Drive

After you have created a password to keep others from accessing the files on your drive, you will have to type your password to unlock the drive whenever:

- You shut down and restart your computer
- You disconnect and reconnect the drive to your computer
- Your computer exits the sleep mode

You will have to do this even if you do not have the WD SmartWare software installed on your computer.

To unlock the drive, see:

- “Unlocking Your Drive with the WD SmartWare Software” on page 52
- “Unlocking Your Drive Without the WD SmartWare Software” on page 53

Unlocking Your Drive with the WD SmartWare Software

Whenever you shut down and restart your computer, or disconnect and reconnect the drive to your computer, the WD SmartWare software displays a Drive is locked message in place of the Content Gauge for your My Passport drive:

To unlock the drive using the WD SmartWare software:

1. As prompted, click the My Passport image above the **Drive is locked** prompt to open the WD SmartWare drive unlock screen:

2. Type your password in the **Password** box.
3. Click **Unlock** to unlock your drive and enable the WD SmartWare software.

Unlocking Your Drive Without the WD SmartWare Software

Whenever you connect your password-protected drive to a computer that does not have the WD SmartWare software installed, you can use the WD SmartWare Drive Unlock utility to unlock the drive there. The WD SmartWare software provides the Drive Unlock utility on a "virtual" CD drive that appears under My Computer in your Windows Explorer display.

To unlock the drive without the WD SmartWare software installed:

1. Start the WD SmartWare Drive Unlock utility by either:
   - Using your computer's file management utility to open the WD Unlock virtual CD and double-clicking the Unlock.exe file
   - Clicking **Start** > **My Computer** and double-clicking the WD Unlock virtual CD icon under Devices with Removable Storage

2. Type your password in the **Password** box.
3. Click **Unlock** to unlock your drive.
4. Click **Exit** at the **Your drive is now unlocked** prompt to close the WD SmartWare Drive Unlock utility.

Uninstalling the WD SmartWare Software

Important: You can easily uninstall the software. However, you will need to restart the backup job manually after reinstalling the software as uninstalling deletes all existing backup job configurations. (See "Backing Up Your Computer Files" on page 13.)

Use your operating system's Add or Remove Programs function to uninstall the WD SmartWare software from your computer.

Uninstalling on Windows XP

1. Click **Start** > **Control Panel**.
2. Double-click **Add or Remove Programs**.
3. Select **WD SmartWare** and click **Remove**.
4. Click **Yes** at the **Are you sure...** prompt.

Uninstalling on Windows Vista or Windows 7

1. Click **Start** > **Control Panel**.
2. Double-click **Programs and Features**.
3. Click **WD SmartWare** or the WD SmartWare icon and click **Uninstall/Change** at the top of the screen.
4. Click **Yes** at the **Do you wish to proceed...** prompt.

Getting Started Without the WD SmartWare Software

If you do not install the WD SmartWare software, you can still use your My Passport as an external hard drive. In this case, however, you will not be able to:

- Protect your data with automatic continuous backups (see “Backing Up Your Computer Files” on page 13)
- Retrieve earlier versions of lost, or damaged files (see “Retrieving Backed Up Files” on page 20)
- Secure you drive and all of the files on it with a password (see “Locking and Unlocking Your Drive” on page 24)
- Customize your software and drive settings for the best possible performance (see “Managing and Customizing Your Drive” on page 29)
- Check the operational condition of your drive with built-in diagnostic features (see “Checking Drive Health” on page 40)

To forego these performance features and get started without installing the WD SmartWare software:

1. Click **Do Not Install** on the Welcome to WD SmartWare screen to display the **Continue without installing WD SmartWare?** prompt:

WD SmartWare
Continue without installing WD SmartWare?
If you choose not to install the WD SmartWare software, you will be unable to use the software features that let you automatically back up and retrieve files, set security to protect data on your drive, and run diagnostics on your drive.
Note: The Windows SES driver will be installed to ensure proper drive functionality.
Go Back
Continue without Install

2. Click:
   - **Continue without Install** if you still do not want to install the WD SmartWare software.
   - **Go Back** if you have changed your mind and do want to install the WD SmartWare software. In this case, go to “Installing the Drive on Windows Computers” on page 43.

9

Troubleshooting

If you have problems installing or using this product, refer to this troubleshooting section or visit our support Web site at *support.wdc.com* and search our knowledge base for more help.

This chapter includes the following topics:

Installing, Partitioning, and Formatting the Drive
Frequently Asked Questions

Installing, Partitioning, and Formatting the Drive

How to	Answer ID
▪ Install, partition, and format the drive in Windows XP and Vista	207, 3322
▪ Install, partition, and format the drive to Mac OS X 10.4.11 and 10.5+	287, 3323
▪ Reformat from Mac GPT to Windows XP NTFS	3645
▪ Reformat the drive from Mac GPT to Windows Vista NTFS format	3647
▪ Obtain and reinstall the original software included with this product	1425
▪ Format the drive to the FAT32 file system*	1364
▪ Use the drive on a Mac and a PC simultaneously	291

**The FAT32 file system has a maximum individual file size of 4 GB and cannot create partitions larger than 32 GB in Windows; however, Windows users can overcome these file size limitations by formatting the drive to NTFS using the Disk Management utility. See answer ID 1287 at support.wdc.com and article IDs 314463 and 184006 at support.microsoft.com for further details. To create partitions larger than 32 GB in FAT32 when reformatting the drive, download the External USB/FireWire FAT32 Formatting Utility from support.wdc.com/download.*

Frequently Asked Questions

Q: *Why does the drive not power up?*

A: Be sure the drive is plugged in to a power source. A special cable may be needed for computers with limited bus power. For more information in the U.S., visit our Web site at *store.westerndigital.com*. Outside the U.S., contact WD Technical Support in your region.

Q: *Why is the drive not recognized under My Computer or on the computer desktop?*

A: If your system has a USB 2.0 PCI adapter card, be sure that its drivers are installed before connecting your WD USB 2.0 external storage product. The drive is not recognized correctly unless USB 2.0 root hub and host controller drivers are installed. Contact the adapter card manufacturer for installation procedures.

Q: *Why won't my computer boot when I connect my USB drive to the computer before booting?*

A: Depending on your system configuration, your computer may attempt to boot from your WD portable USB drive. Refer to your system's motherboard BIOS setting documentation to disable this feature or visit *support.wdc.com* and see Knowledge Base answer ID 1201. For more information about booting from external drives, refer to your system documentation or contact your system manufacturer.

Q: *Why is the data transfer rate slow?*

A: Your system may be operating at USB 1.1 speeds due to an incorrect driver installation of the USB 2.0 adapter card or a system that does not support USB 2.0.

Q: *How do I determine whether or not my system supports USB 2.0?*

A: Refer to your USB card documentation or contact your USB card manufacturer.

Note: If your USB 2.0 controller is built in to the system motherboard, be sure to install the appropriate chipset support for your motherboard. Refer to your motherboard or system manual for more information.

Q: *What happens when a USB 2.0 device is plugged into a USB 1.1 port or hub?*

A: USB 2.0 is backward-compatible with USB 1.1. When connected to a USB 1.1 port or hub, a USB 2.0 device operates at the USB 1.1 full speed of up to 12 Mbps. If your system includes a PCI slot, you can achieve Hi-Speed USB transfer rates by installing a USB 2.0 PCI adapter card. Contact the card manufacturer for installation procedures and more information.

A

Installing an SES Driver

If you decide to not install the WD SmartWare software, you must have an SES driver installed on computers running Windows to keep the hardware popup wizard from displaying every time you connect your My Passport drive to your computer.

Note: The SES Driver is installed automatically when you install the WD SmartWare software or if you clicked **Do Not Install** on the Welcome to WD SmartWare screen (see "Getting Started Without the WD SmartWare Software" on page 14).

This appendix includes the following topics:

Installing on Windows XP Computers
Installing on Windows Vista Computers
Installing on Windows 7 Computers

Installing on Windows XP Computers

After you physically connect the drive as shown in Figure 3 on page 5 or Figure 4 on page 6, the Found New Hardware Wizard screen displays.

Note: If Autoplay is enabled, two additional screens might appear at the same time as the Found New Hardware Wizard screen. If they appear, close them.

You can use the Found New Hardware Wizard to install the SES driver either:

- Automatically, if your computer is connected to the Internet
- Manually, whether your computer is connected to the Internet or not

Installing the Driver Automatically

To install the SES driver automatically, your computer must be connected to the Internet:

1. Verify that your computer is connected to the Internet.
2. On the Found New Hardware Wizard screen, select **Yes this time only** to allow Windows XP to connect to Windows Update:

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).
Read our privacy policy
Can Windows connect to Windows Update to search for software?
Yes, this time only
Yes, now and every time I connect a device
No, not this time
Click Next to continue.
< Back
Next >
Cancel

3. Click **Next** to continue.

4. Select **Install the software automatically** and click **Next**:

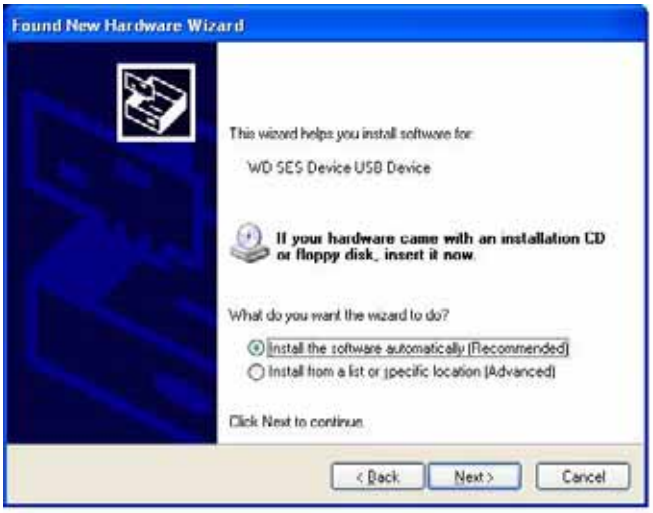
Found New Hardware Wizard
This wizard helps you install software for:
WD SES Device USB Device
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

5. When the installation completes, click **Finish**:

Installing the Driver Manually

If your computer is not connected to the Internet, install the driver manually:

1. On the Found New Hardware Wizard screen, select **No, not this time** to inhibit a connection attempt to Windows Update:

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).
Read our privacy policy
Can Windows connect to Windows Update to search for software?
Yes, this time only
Yes, now and every time I connect a device
No, not this time
Click Next to continue.
< Back
Next >
Cancel

2. Click **Next** to continue.
3. Select **Install from a list or specific location** and click **Next**:

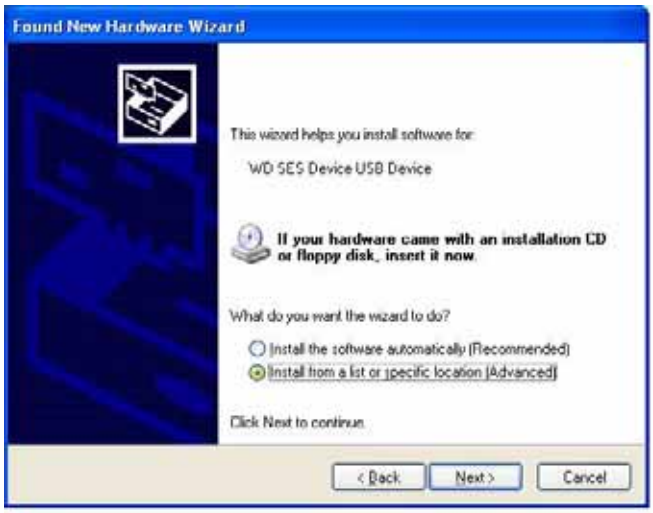
Found New Hardware Wizard
This wizard helps you install software for:
WD SES Device USB Device
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

4. Browse to **My Computer** and:
   a. Double-click the My Passport drive.
   b. Double-click the Extras folder.
   c. Select **WD SES Device Driver**.

d. Click **Next**:

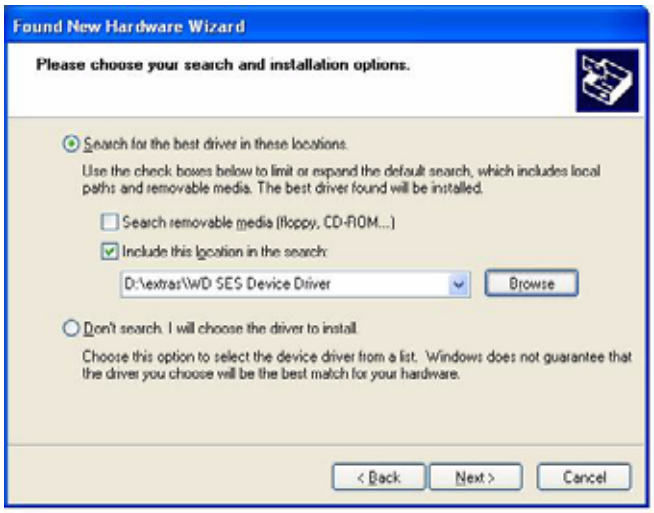
Found New Hardware Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
D:\extras\WD SES Device Driver
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back
Next >
Cancel

5. When the installation completes, click **Finish**:

Installing on Windows Vista Computers

After you physically connect the drive as shown in Figure 3 on page 5 or Figure 4 on page 6, the Found New Hardware screen displays.

Note: If Autoplay is enabled, two additional screens might appear at the same time as the Found New Hardware screen. If they appear, close them.

You can use the Found New Hardware screen to install the SES driver either:

- Automatically, if your computer is connected to the Internet
- Manually, whether your computer is connected to the Internet or not

Installing the Driver Automatically

To install the SES driver automatically, your computer must be connected to the Internet:

1. Verify that your computer is connected to the Internet.
2. On the Found New Hardware wizard screen, click **Locate and install driver software**:

Found New Hardware
Windows needs to install driver software for your WD SES Device USB Device
Locate and install driver software (recommended)
Windows will guide you through the process of installing driver software for your device.
Ask me again later
Windows will ask again the next time you plug in your device or log on.
Don't show this message again for this device
Your device will not function until you install driver software.
Cancel

3. On the Found New Hardware - WD SES Device wizard screen, click **Yes, search online this time only** to allow Windows Vista to connect to Windows Update:

Found New Hardware - WD SES Device
Allow Windows to search online for driver software for your WD SES Device?
Yes, always search online (recommended)
Windows will automatically search for the latest drivers and applications for your hardware and download them to your computer.
Yes, search online this time only
Windows will search for the latest drivers and applications for this device and download them to your computer.
Don't search online
Your device may not function properly until you get the latest software.
Please read Microsoft's privacy statement
Cancel

Windows Vista automatically:

- Connects to Windows Update
- Finds, downloads, and installs the SES driver

Installing the Driver Manually

If your computer is not connected to the Internet, install the driver manually:

1. On the Found New Hardware wizard screen, click **Locate and install driver software**:

Found New Hardware
Windows needs to install driver software for your WD SES Device USB Device
Locate and install driver software (recommended)
Windows will guide you through the process of installing driver software for your device.
Ask me again later
Windows will ask again the next time you plug in your device or log on.
Don't show this message again for this device
Your device will not function until you install driver software.
Cancel

2. On the Found New Hardware - WD SES Device wizard screen, click **Don't search online**:

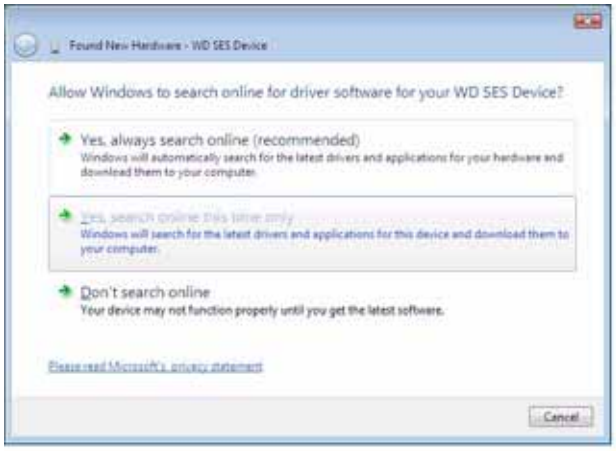
Found New Hardware - WD SES Device
Allow Windows to search online for driver software for your WD SES Device?
Yes, always search online (recommended)
Windows will automatically search for the latest drivers and applications for your hardware and download them to your computer.
Windows will search for the latest drivers and applications for this device and download them to your computer.
Don't search online
Your device may not function properly until you get the latest software.
Cancel

3. At the **Install the disc that came with your WD SES Device** prompt, click **I don't have the disc. Show me other options**:

Found New Hardware - WD SES Device
Insert the disc that came with your WD SES Device
If you have the disc that came with your device, insert it now. Windows will automatically search the disc for driver software.
I don't have the disc. Show me other options.
Next
Cancel

4. Browse to **Computer** and:
   a. Double-click the My Passport drive.
   b. Double-click the Extras folder.
   c. Select **WD SES Device Driver**.
   d. Click **Next**:

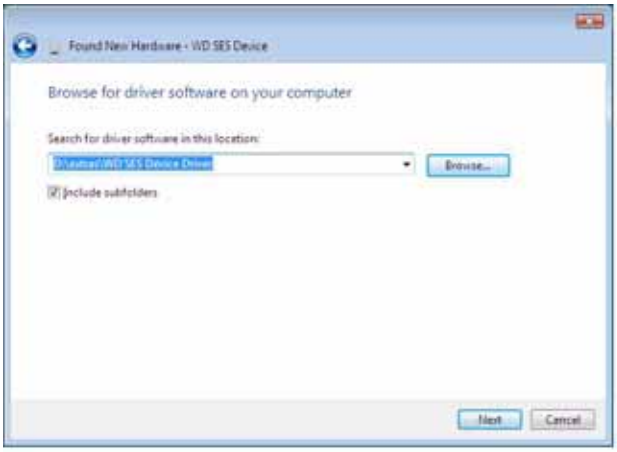

5. When the installation completes, click **Close**:

Found New Hardware - WD SES Device
The software for this device has been successfully installed
Windows has finished installing the driver software for this device:
WD SES Device
Close

Installing on Windows 7 Computers

After you physically connect the drive as shown in Figure 3 on page 5 or Figure 4 on page 6, use the Windows 7 Computer Management utility to install the SES driver:

1. Open **All Programs** and click **Computer** > **Manage**:

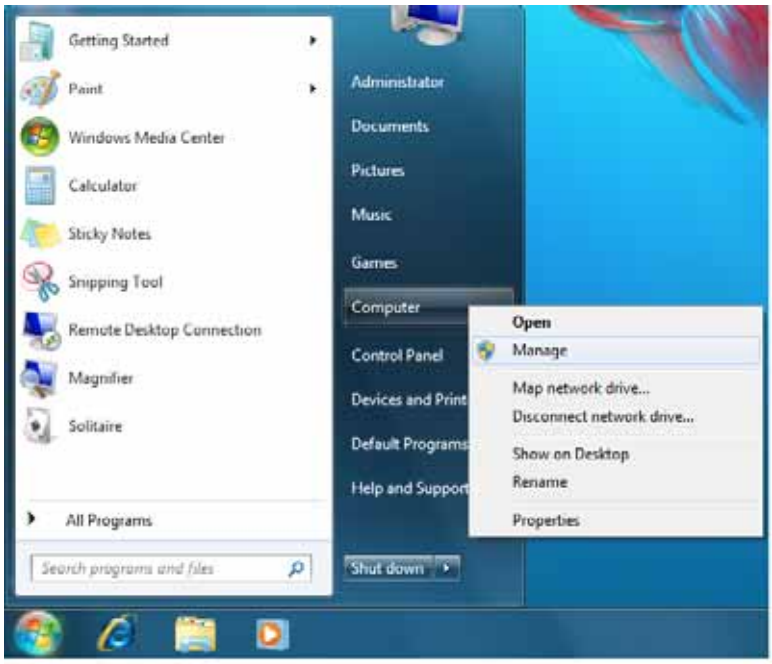

2. Under **Computer Management (Local)**, click **Device Manager** > **Unknown Device** and right-click **Update driver software**:

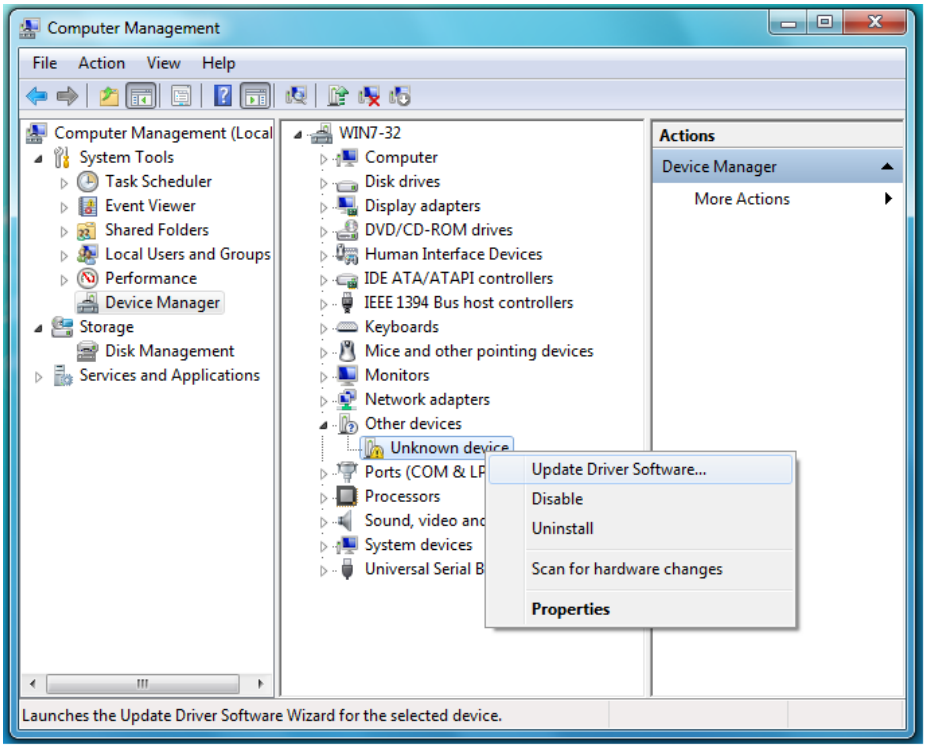

3. Click **Browse my computer for driver software**.

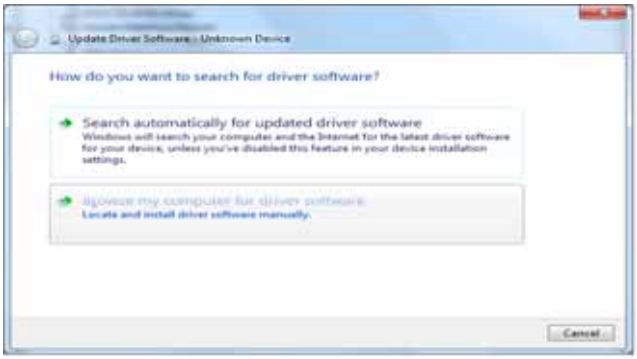
Update Driver Software - Unknown Device
How do you want to search for driver software?
Search automatically for updated driver software
Browse my computer for driver software
Locate and install driver software manually.
Cancel

4. Browse to **Computer,** double-click the My Passport drive, double-click the Extras folder, and select **WD SES Device Driver**:

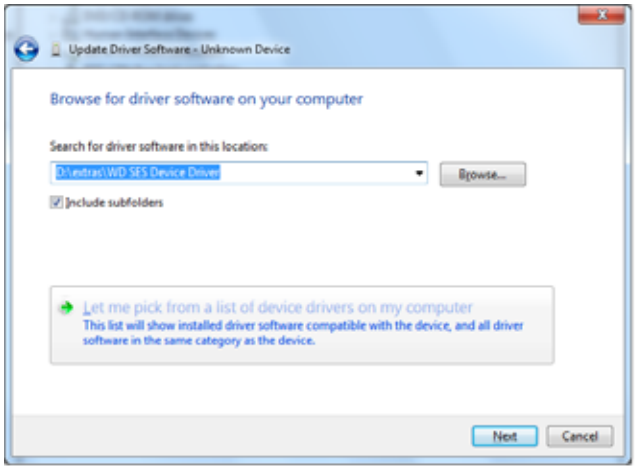
Update Driver Software - Unknown Device
Browse for driver software on your computer
Search for driver software in this location:
D:\extras\WD SES Device Driver
Browse...
Include subfolders
Let me pick from a list of device drivers on my computer
This list will show installed driver software compatible with the device, and all driver software in the same category as the device.
Next
Cancel

5. Click **Next**.
6. When the installation completes, click **Close**:

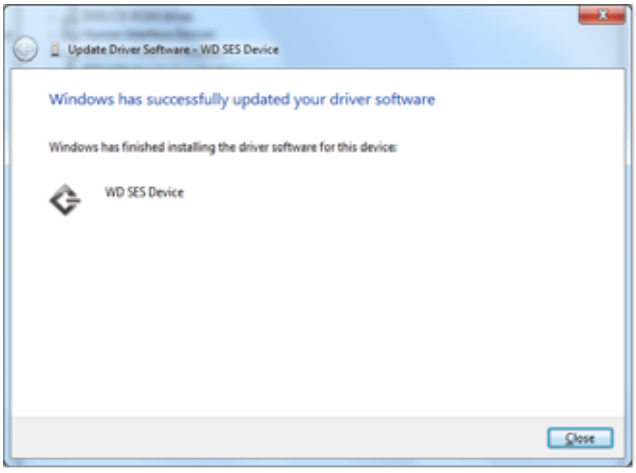
Update Driver Software - WD SES Device
Windows has successfully updated your driver software
Windows has finished installing the driver software for this device:
WD SES Device
Close

B

Compliance and Warranty Information

This appendix includes the following topics:

Regulatory Compliance
Environmental Compliance (China)
Warranty Information

Regulatory Compliance

FCC Class B Information

This device has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Any changes or modifications not expressly approved by WD could void the user's authority to operate this equipment.

ICES-003/NMB-003 Statement

Cet appareil numérique de la classe B est conforme à la norme ICES-003 du Canada.

This device complies with Canadian ICES-003 Class B.

Safety Compliance

Approved for US and Canada. CAN/CSA-C22.2 No. 60950-1, UL 60950-1: Safety of Information Technology Equipment.

Approuvé pour les Etats-Unis et le Canada. CAN/CSA-C22.2 No. 60950-1, UL 60950-1: Sûreté d'équipement de technologie de l'information.

CE Compliance For Europe

Marking by the CE symbol indicates compliance of this system to the applicable Council Directives of the European Union, including the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC). A "Declaration of Conformity" in accordance with the applicable directives has been made and is on file at Western Digital Europe.

KCC Notice (Republic of Korea only)

기종별§	사용자 안내문§
B급 기기¶ (가정용 정보통신기기)§	이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.§

Class B Device 1 Please note that this device has been approved for non-business purposes and may be used in any environment, including residential areas.

Environmental Compliance (China)

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
防震支架 (L1, L2, R1, R2)	O	O	O	O	O	O
橡皮脚垫 (4 片)	O	O	O	O	O	O
机箱外皮壳与镜片	O	O	O	O	O	O
机箱页壳	O	O	O	O	O	O
硬碟/电路板组合	X	O	O	O	O	O
迷你 USB 缆线	O	O	O	O	O	O

O: 代表此种部件所用的均质材料中所含的该种有毒有害物质均低于 SJ/T 11363-2006 规定的限量。
X: 代表此种部件所用的均质材料中所含的该种有毒有害物质均高于 SJ/T 11363-2006 规定的限量。
(在此表中，企业可能需要根据实际情况对标记"X"的项目进行进一步的技术性解释。)

Warranty Information

Obtaining Service

WD values your business and always attempts to provide you the very best of service. If this Product requires maintenance, either contact the dealer from whom you originally purchased the Product or visit our product support website at *support.wdc.com* for information on how to obtain service or a Return Material Authorization (RMA). If it is determined that the Product may be defective, you will be given an RMA number and instructions for Product return. An unauthorized return (i.e., one for which an RMA number has not been issued) will be returned to you at your expense. Authorized returns must be shipped in an approved shipping container, prepaid and insured, to the address provided on your return paperwork. Your original box and packaging materials should be kept for storing or shipping your WD product. To conclusively establish the period of warranty, check the warranty expiration (serial number required) via *support.wdc.com*. WD shall have no liability for lost data regardless of the cause, recovery of lost data, or data contained in any Product placed in its possession.

Limited Warranty

WD warrants that the Product, in the course of its normal use, will for the term defined below, be free from defects in material and workmanship and will conform to WD's specification therefor. The term of your limited warranty depends on the country in which your Product was purchased. The term of your limited warranty is for 2 years in the North, South and Central America region, 2 years in the Europe, the Middle East and Africa region, and 3 years in the Asia Pacific region, unless otherwise required by law. The term of your limited warranty period shall commence on the purchase date appearing on your purchase receipt. WD shall have no liability for any Product returned if WD determines that the Product was stolen from WD or that the asserted defect a) is not present, b) cannot reasonably be rectified because of damage occurring before WD receives the Product, or c) is attributable to misuse, improper installation, alteration (including removing or obliterating labels and opening or removing external enclosures,

unless the product is on the list of limited user-serviceable products and the specific alteration is within the scope of the applicable instructions, as found at *support.wdc.com*), accident or mishandling while in the possession of someone other than WD. Subject to the limitations specified above, your sole and exclusive warranty shall be, during the period of warranty specified above and at WD's option, the repair or replacement of the Product.

The foregoing limited warranty is WD's sole warranty and is applicable only to products sold as new. The remedies provided herein are in lieu of a) any and all other remedies and warranties, whether expressed, implied or statutory, including but not limited to, any implied warranty of merchantability or fitness for a particular purpose, and b) any and all obligations and liabilities of WD for damages including, but not limited to accidental, consequential, or special damages, or any financial loss, lost profits or expenses, or lost data arising out of or in connection with the purchase, use, or performance of the Product, even if WD has been advised of the possibility of such damages. In the United States, some states do not allow exclusion or limitations of incidental or consequential damages, so the limitations above may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

GNU General Public License ("GPL")

Firmware incorporated into this product may include third party copyrighted software licensed under the GPL or Lesser General Public License ("LGPL") (collectively, "GPL Software") and not Western Digital's End User License Agreement. In accordance with the GPL, if applicable: 1) the source code for the GPL Software may be downloaded at no charge from *http://support.wdc.com/download/gpl* or obtained on CD for a nominal charge from *http://support.wdc.com/download/gpl* or by calling Customer Support within three years of the date of purchase; 2) you may re-use, re-distribute, and modify the GPL Software; 3) with respect solely to the GPL Software, no warranty is provided, to the extent permitted by applicable law; and 4) a copy of the GPL is included herewith, may be obtained at *http://www.gnu.org*, and may also be found at *http://support.wdc.com/download/gpl*.

Modification of or tampering with the Software, including but not limited to any Open Source Software, is solely at your own risk. Western Digital is not responsible for any such modification or tampering. Western Digital will not support any product in which you have or have attempted to modify the Software supplied by Western Digital.

Index

A
Accessories, optional 2

B
Backup
about backing up files 13
files content box 16
procedure 15, 16
screen 14
Box contents 2

C
Cables 2
CAUTION
about erasing the drive 35
about lost passwords 24
about preventing data loss when disconnecting 31, 50
about your unlocked drive 25
China RoHs 67
Compatibility with operating systems 3
Compliance 66
Converting drive format 55
Creating a password 24

D
Diagnostics drive setting 34
Disk image, downloading and restoring 39, 42
Dismounting drive 31
Dock for drive 2
Documents file category 49
Drive
diagnostics and status checks 40
eraser, setting 34
handling precautions 4
sleep timer 35
Drive formats 3
Drive Settings
diagnostics 34
drive eraser 34, 35
file history 32
registration 34
security 24, 34
sleep timer 34, 35

E
Environmental compliance, China 67
Erasing the drive 35
CAUTION about erasing the drive 35

F
FCC Class B information 66
File
categories, defined 49
history, drive setting 32
history, screen 18
Formatting the drive 55
Full Media Scan 40

G
GNU general public license 68
GPL software 68

H
Handling precautions 4
Hardware 2

I
ICES-003/NMB-003 compliance 66
Indicator light 4
Info/online help, viewing 12

K
Kit contents 2

L
Launching WD SmartWare software 29
LED indicator 4
Limited Warranty 67

M
Mail file category, defined 49
Micro cables 2
Movies file category, defined 49
Music file category, defined 49
My Passport Dock 2

O
Online help, viewing 12
Operating systems 3
Other file category, defined 49

P
Password protecting your drive 24
CAUTION about lost passwords 24
Performance enhancement 7
Physical description 3
Pictures file category, defined 49
Precautions for handling 4
Preferences options, setting 33
Preferences software setting 32
Product features 1
Product registration 4

Q
Quick Diagnostic Self-test 40

R
Reformatting the drive 3, 42
Register Drive screen 34
Registering your drive 4, 34
Registration drive setting 34
Regulatory compliance 66
Restarting WD SmartWare software 29
Restoring the software disk image 39, 42
Retrieve
about retrieving files 20
folder, software setting 32
folder, specifying 32
procedure 20, 23
RoHS 67

S
Safety compliance 66
Security drive settings 34
Serial number 30, 32
Service 67
Set
preferences screen 33
retrieve folder screen 32
sleep timer screen 35
Setting the drive sleep timer 35
Sleep Timer drive setting 34
SMART Status Check 40
Software Settings
preferences 32, 33
retrieve folder 32
system throttling 32
Software, GPL 68
Space available 30, 32
Settings
See Drive Settings
Status check 30, 32
System
file category, defined 12, 15
throttling software setting 32
System compatibility 3

U
Unlocking the drive 25, 32, 51
with the WD SmartWare software 26, 52
without the WD SmartWare software 27, 53
USB drive interface 4

V
Virtual CD
dismounting 30, 32
unlocking the drive from 27

W
Warranty 67
WD +TURBO 7
WD Service 67
WD SmartWare icon
Windows 29
Windows
disconnecting a drive 50
flashing icon alerts 50
status check 49
temperature check 49
uninstalling WD SmartWare software 53
Windows XP
installing drive on 43

Information furnished by WD is believed to be accurate and reliable; however, no responsibility is assumed by WD for its use nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of WD. WD reserves the right to change specifications at any time without notice.

Western Digital, WD, the WD logo, My Book and My Passport are registered trademarks, and WD SmartWare, and Data Lifeguard are trademarks of Western Digital Technologies, Inc. Other marks may be mentioned herein that belong to other companies.

© 2010 Western Digital Technologies, Inc. All rights reserved.

Western Digital
3355 Michelson Drive, Suite 100
Irvine, California 92612 U.S.A.

4779-705030-A03 Mar 2011